

B & K DYNA-JET MODEL 707 TUBE CHART

TUBE TYPE	Heater	Socket	Sensitivity	A	B	O	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensitivity	A	B	O	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensitivity	A	B	O	D	Test Pos.																																				
9A3	50	38	*70	2	11	3	5	1	1D13	2	41	*70	7	1	2	6	1	1S5	2	41	54	7	1	5	6	1																																				
*Normally shows short on position 11.									*Normally shows short position 5-11									1T4									2	41	50	7	1	5	6	1																												
*Normally shows grid emission.									1D63									1	38	*95	3	8	5	10	1	1T5									1	38	54	7	2	12	5	1																				
9A3A	50	38	*70	2	11	3	5	1	*TUBE good if it reads 20 or more.									1U4									2	41	49	7	1	5	6	1																												
*Normally shows short on position 11.									*No short test.									1U5									2	41	54	7	1	12	6	1																												
*Normally shows grid emission.									1D-K1									1	40	*75	4	5	1	10	1	1V2									1	40	99	5	4	12	1	1																				
9B3	50	38	*69	2	11	3	5	1	*Insert leads into pins 4 & 5 of socket 40.									1X2									1	24	56					1																												
*Normally shows short on position 11.									*Top cap goes to top lead.									2AF4									2	41	*24	4	3	2	6	1																												
*Normally shows grid emission.									*TUBE good if it reads 20 or more.									2AH2									2	45	99	1	12	12	10	1																												
9C3	50	38	*85	2	11	3	5	1	1DK29									1	40	*75	4	5	1	10	1	2AS2									2	45	99	1	12	12	10	1																				
*Normally shows short on position 11.									*Insert leads into pins 4 & 5 of socket 40.									2AV2									2	40	*99	4	5	12	1	1																												
*Normally shows grid emission.									Top cap goes to top lead.									*TUBE good if it reads 55 or more.									2A22									2	24	35					1																			
*Normally shows short on position 11.									1DN5									2	41	54	7	1	12	6	1	2B3									2	32	30					1																				
*Normally shows grid emission.									75									7	1	12	4	1	2BA2									2	40	88	4	5	12	1	1																							
9D3	50	38	*99	2	11	3	5	1	1DY4									1	41	*24	4	3	2	6	1	2BJ2									2	24	52					1																				
*Normally shows short on position 11.									*Normally shows short position 1-7.									2BN4									2	41	*33	4	3	2	7	1																												
*Normally shows grid emission.									1F1									1	41	58	7	1	5	6	1	*Normally shows short position 1-6.									2BU2									2	45	*80	1	12	12	10	1											
*TUBE good if it reads 60 or more.									1F2									1	41	55	7	1	5	6	1	*TUBE good if it reads 30 or more.									2C51									6	39	29	9	1	12	3	1											
9D3A	50	38	*99	2	11	3	5	1	1F3									1	41	55	7	1	5	6	1	29									9	1	12	7	1	1																						
*Normally shows short on position 11.									1F5									2	38	48	7	2	12	5	1	2CN3A									2	32	30					1																				
*Normally shows grid emission.									1F7									2	38	54	7	2	12	10	1	2CW4									2	43	*87	10	12	12	2	1																				
*TUBE good if it reads 60 or more.									1FD1									1	41	58	7	1	12	6	1	*For grid emission, Turn D Switch to position 4.									2CY5									2	1	54					1											
9Z4	6	31	8					1	1FD9									1	41	56	7	1	12	6	1	2D21									6	41	32	4	3	5	1	1																				
8									1G3									1	32	55					1	2DL4									2	39	*85	4	5	7	8	1																				
1A3	2	41	*70	7	1	2	6	1	1G6									1	38	55	7	2	12	4	1	*Normally shows short position 1-3-6-9.									2DS4									2	43	*87	10	12	12	2	1											
1A5	2	38	53	7	2	12	5	7	1H2									1	24	58					1	*For grid emission, Turn D Switch to position 4.									2DX4									2	41	*62	3	4	1	7	1											
1A7	2	38	54	7	2	12	5	1	1H5									1	38	55	7	2	12	10	1	*Normally shows short																																				
1AB6	1	41	54	7	1	12	4	1	1H6									2	38	54	7	2	12	6	1	2DY4									2	41	*24	4	3	2	6	1																				
1AC6	1	41	48	7	1	12	4	1	65									7	2	12	5	1	2DZ4									2	41	*31	3	4	6	2	1																							
1AD2	1	45	*99	1	12	12	10	1	1H35									1	41	54	7	1	12	4	1	*Normally shows short position 1-7.									2E26									6	38	*40	7	2	1	5	1											
*TUBE good if it reads 20 or more.									1J3									1	32	88					1	2EA5									2	1	80					1																				
1AF4	1	41	50	7	1	5	6	1	1J6									2	38	53	7	2	12	4	1	2EG4									2	43	*72	10	12	12	2	1																				
1AH5	1	41	58	7	1	12	6	1	53									7	2	12	5	1	*For grid emission, Turn D Switch to position 4.									2EN5									2	41	35	3	4	12	2	1														
70									1K3									1	32	90					1	2ER5									2	41	33	4	3	1	2	1																				
1AJ4	1	41	58	7	1	5	6	1	1L4									2	41	52	7	1	5	6	1	2ES5									2	41	33	4	3	1	2	1																				
1AN5	1	41	40	7	1	5	6	1	1L6									2	41	56	7	1	12	4	1	2EV5									2	1	57					1																				
1AU2	1	40	*100	5	4	12	1	1	1LA4									2	37	53	8	1	12	6	1	2FH5									2	41	33	4	3	1	2	1																				
*TUBE good if it reads 20 or more.									1LA6									2	37	58	8	1	12	4	1	2FS5									2	1	99					1																				
1AU3	1	32	95					1	1LB4									2	37	53	8	1	12	6	1	2FQ5									2	41	33	4	3	1	2	1																				
1AX2	1	24	93					1	1LC5									1	37	54	8	1	5	6	1	2FQ5A									2	41	31	4	3	1	2	1																				
1AY2	1	*39	95	1	9	12	10	1	1LC6									2	37	59	8	1	12	4	1	2FV6									2	1	54					1																				
*Connect two leads from 1AY2 bottom pins to pin holes No. 1 and 9 of Socket No. 39.									1LD5									2	37	53	8	1	12	6	1	2FY5									2	41	33	4	3	1	2	1																				
1B3	1	32	55					1	1LE3									1	37	55	8	1	12	6	1	2GK5									2	41	25	4	3	1	2	1																				
1B7	1	38	55	7	2	12	5	1	1LG5									2	37	50	8	1	5	6	1	2GU5									2	41	27	3	4	2	1	1																				
1BC2	1	24	57					1	1LH4									2	37	52	8	1	12	6	1	2GW5									2	41	29	3	4	6	2	1																				
1BG2	1	40	*75	4	5	1	10	1	1LN5									2	37	50	8	1	5	6	1	2HA5									2	5	56					1																				
*Insert leads into pins 4 & 5 of socket 40.									1IN2-A									1	32	53					1	2HK5									2	5	56					1																				
Top cap goes to top lead.									1N5									2	38	53	7	2	12	10	1	2HM5									2	5	57					1																				
*TUBE good if it reads 20 or more.									1P5									2	38	53	7	2	12	10	1	2HQ5									2	5	55					1																				
1BH2	1	*39	95	1	9	12	10	1	1P10									3	41	*48	7	1	5	3	1	2HR8									2	39	33	4	5	2	9	1																				
*Connect two leads from solder lugs of the 1BH2 to pin holes No. 1 and 9 of Socket No. 39.									*Normally shows short position 2-6.									2I4									2	41	*33	4	3	2	6	1																												
1BK2	1	24	*53					1	1P11									3	41	45	7	1	5	6	1	*Normally shows short position 1-7.									3A2									3	24	35					1											
*TUBE good if it reads 40 or more.									1Q5									2	38	40	7	2	12	5	1	3A3									3	32	54					1																				
1BQ2	1	24	56					1	1R-K23									1	24	35					1	3A3A									3	32	54					1																				
1BX2	1	24	56					1	1R-K41									1	24	*53					1																																					
1B'2	1	45	*99	1	12	7	10	1	*TUBE good if it reads 40 or more.																																																					
*TUBE good if it reads 20 or more.									1R4									2	37	60	8	1	12	4	1																																					
1C1	1	41	57	7	1	5	4	1	1R5									2	41	53	7	1	5	4	1																																					
1C2	1	41	48	7	1	12	4	1	1S2-A									1	24	35					1																																					
1C3	1	41	54	7	1	12	4	1	1S4									2	41	*44	7	1	5	3	1																																					
1C5	2	38	48	7	2	12	5	1	*Normally shows short position 2-6.																																																					
1C6	2	38	54	7	2	12	5	1																																																						
1C7	2	38	53	7	2	12	5	1																																																						
1C8	2	38	53	7	2	12	5	1																																																						
1C9	2	38	53	7	2	12	5	1																																																						
1C10	2	38	53	7	2	12	5	1																																																						
1C11	2	38	53	7	2	12	5	1																																																						
1C12	2	38	53	7	2	12	5	1																																																						
1C13	2	38	53	7	2	12	5	1																																																						
1C14	2	38	53	7	2	12	5	1																																																						
1C15	2	38	53	7	2	12	5	1																																																						
1C16	2	38	53	7	2	12	5	1																																																						
1C17	2	38	53	7	2	12	5	1																																																						
1C18	2	38	53	7	2	12	5	1																																																						
1C19	2	38	53	7	2	12	5	1																																																						
1C20	2	38	53	7	2	12	5	1																																																						
1C21	2	38	53	7	2	12	5	1																																																						
1C22	2	38	53	7	2	12	5	1																																																						
1C23	2	38	53	7	2	12	5	1																																																						
1C24	2	38	53	7	2	12	5	1																																																						
1C25	2	38	53	7	2	12	5	1																																																						
1C26	2	38	53	7	2	12	5	1																																																						
1C27	2	38	53	7	2	12	5	1																																																						
1C28	2	38	53	7	2	12	5	1																																																						
1C29	2	38	53	7	2	12	5	1																																																						
1C30	2	38	53	7	2	12	5	1																																																						
1C31	2	38	53	7	2	12	5	1																																																						
1C32	2	38	53	7	2	12	5	1																																																						
1C33	2	38	53	7	2	12	5	1																																																						

*Normal Shorts Refer to Position of "D" Switch.

B & K DYNA-JET MODEL 707 TUBE CHART

Page 2

TUBE TYPE	Heater	Socket	Sensitivity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensitivity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensitivity	A	B	C	D	Test Pos.
3A4	3	41	*36	7	1	5	4	1	3DF3	3	38	*75	3	8	5	10	1	3S4	3	41	*48	7	1	5	3	1
*Normally shows short position 2-6.									*Tube good if it reads 20 or more.									*Normally shows short position 2-6.								
3A5	3	41	45	7	1	4	3	1	*No short test.									3V4								
3A8	3	38	54	7	2	1	10	1	3DG4	3	38	26	1	3	12	5	1	4AB8	4	39	37	5	4	12	9	1
			55	7	2	1	5	1				26	1	3	12	7	1				44	5	4	12	2	1
			92	7	2	1	8	1	3DH3	3	38	*90	3	8	5	10	1	4AU6	4	1	82					1
3AB4	3	2	83					1	*Tube good if it reads 40 or more.									4AU8								
3AF4	3	41	*24	4	3	2	6	1	*No short test.									4AV6								
*Normally shows short position 1-7.									3DJ3	3	32	*30					1	71								
3AJ8	3	39	85	5	4	12	1	1	*Tube good if it reads 30 or more.									78								
3AL5	3	41	33	3	4	12	2	1	3DK6	3	1	61					1	4BA6	4	1	78					1
3AT2	3	45	96	1	12	12	10	1	3DR3	3	38	*90	3	8	5	10	1	4BC5	4	1	74					1
3AU6	3	1	82					1	*Tube good if it reads 40 or more.									4BC8								
3AV6	3	6	88					1	*Ignore all shorts except position 10.									4BE6								
3AW2	3	45	91	1	12	12	10	1	3D6	3	1	91					1	4BL8	4	11	66					1
3AW3	3	32	55					1	3DX4	3	41	*62	3	4	1	7	1	4BN4	4	41	*33	4	3	2	7	1
3B2	3	32	72					1	*Normally shows short position 2-6.									4BN6								
3B7	3	37	45	8	1	4	3	1	3DY4	3	41	*24	4	3	2	6	1	*Normally shows short position 1-6.								
			45	8	1	4	6	1	3DZ4	3	41	*31	3	4	6	2	1	4BQ7	4	8	54					1
3BA6	3	1	78					1	*Normally shows short position 1-7.									4BS8								
3BC5	3	1	74					1	3EA5	3	1	80					1	54								
3BE6	3	1	91					1	3EH7	3	9	40					1	4BU8	4	21	92					1
3BH2	3	44	*94	4	5	4	10	1	3EJ7	3	9	58					1	92								
*No short test.									3ER5	3	41	33	4	3	1	2	1	4BX6	4	9	76					1
3BL2	3	45	85	1	12	12	10	1	3ES5	3	41	33	4	3	1	2	1	4BX8	4	39	33	5	4	12	2	1
3BM2	3	45	85	1	12	12	10	1	3EV5	3	1	57					1	33								
3BN2	3	45	*99	1	12	12	10	1	3FH5	3	41	33	4	3	1	2	1	4BZ6	4	1	61					1
*Tube good if it reads 50 or more.									3FQ5	3	41	33	4	3	1	2	1	4BZ7	4	8	53					1
3BN4	3	41	*33	4	3	2	7	1	3FQ5A	3	41	31	4	3	1	2	1	4BZ8	4	8	55					1
*Normally shows short position 1-6.									3FS5	3	1	99					1	55								
3BN6	3	7	75					1	3FY5	3	41	33	4	3	1	2	1	4CB6	4	1	64					1
3BS2	3	45	87	1	12	12	10	1	3GK5	3	41	25	4	3	1	2	1	4CE5	4	1	62					1
3BS2A	3	45	87	1	12	12	10	1	3GK6	3	9	40					1	4CM4	4	40	29	4	5	3	6	1
3BT2	3	45	*80	1	12	12	10	1	3GS8	3	21	95					1	4CS6	4	1	94					1
*Tube good if it reads 30 or more.											95					2	4CY5	4	1	54					1	
3BU8	3	21	92					1	3GU5	3	41	27	3	4	2	1	1	4DE6	4	1	61					1
			92					2	3GW5	3	41	29	3	4	6	2	1	4DK6	4	1	61					1
3BW2	3	45	*80	1	12	12	10	1	3GY5	3	36	*25	1	12	5	9	1	4DL4	4	39	*85	4	5	7	8	1
*Tube good if it reads 30 or more.									*Normally shows short position 1-3-4-7-10.									*Normally shows short position 1-3-6-9.								
3BX6	3	9	76					1	3HA5	3	5	56					1	4DL5	4	3	88					1
3BY6	3	1	91					1	3HE7	3	36	27	1	12	10	2	1	4DT6	4	1	91					1
3BY7	3	9	62					1			27	1	12	10	9	1	1	4EH7	4	9	40					1
3BZ6	3	1	61					1	3HF5	3	36	*25	1	12	9	5	1	4EJ7	4	9	58					1
3C2	3	32	22					1	*Normally shows short position 3-4-6-8-10-11.									4ER5								
3C4	2	41	48	7	1	5	6	1	3HK5	3	5	56					1	4ES8	4	41	33	4	3	1	2	1
3CA3	3	32	55					1	3HM5	3	5	57					1	30								
3CB6	3	1	64					1	3HM6	3	9	68					1	4EW6	4	1	77					1
3CE5	3	1	62					1	3HQ5	3	5	55					1	4GJ7	4	22	62					1
3CF6	3	1	60					1	3HS8	3	21	99					1	78								
3CN3	3	32	30					1			99					2	4GK5	4	41	25	4	3	1	2	1	
3CN3A	3	32	30					1	3HT6	3	9	60					1	4GM6	4	1	64					1
3CS6	3	1	94					1	3JC6	3	9	65					1	4GS7	4	14	80					1
3CU3	3	32	20					1	3JC6A	3	9	59					1	4GS8	4	21	95					1
3CV3	3	32	*40					1	3JD6	3	9	61					1	95								
*Tube good if it reads 40 or more.									3KF8	3	21	92					1	4GW5	4	41	29	3	4	6	2	1
3CX3	3	38	*88	3	8	4	10	1			92					2	4GX6	4	1	85					1	
*Ignore all shorts.									3KT6	3	9	52					1	4GX7	4	22	76					1
3CY3	3	32	60					1	3L35	3	41	*36	7	1	5	4	1	73								
3CY5	3	1	54					1	*Normally shows short position 2-6.									4GZ5								
3CZ3	3	32	35					1	3LF4	3	37	43	8	1	7	6	1	4HA5	4	41	26	3	4	2	5	1
3D6	2	37	43	8	1	7	6	1	3M-P26	3	7	81					1	4HA7	4	36	35	1	12	5	9	1
3DA3	3	38	*88	3	8	5	10	1	3M-R24	3	1	51					1	35								
*Ignore all shorts except position 10.									3M-V7	3	1	61					1	4HC7	4	36	*35	1	12	5	9	1
3DB3	3	32	60					1	3Q4	3	41	*42	7	1	5	3	1	*35								
3DC3	3	32	*13					1	*Normally shows short position 2-6.									*Normally shows short position 7-10.								
*Tube good if it reads 30 or more.									3Q5	3	38	45	7	2	8	5	1									

*Normal Shorts refer to position of "D" Switch. ♦Use TC-80 Adapter.

3A4

TUBE TYPE	Heater	Socket	Sensitiv-ity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensitiv-ity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensitiv-ity	A	B	C	D	Test Pos.		
4HG8	4	39	25	4	5	3	2	1	5BE8	5	14	72					1	5HC7	5	36	*35	1	12	5	9	1		
			25	4	5	1	6	1				55					2				*35	1	12	5	11	1		
4HK5	4	5	56					1	5BK7	5	8	55					1				*Normally shows short position 7-10.							
4HM5	4	5	57					1				55					2	5HG8	5	39	24	4	5	3	2	1		
4HM6	4	9	68					1	5BQ5	5	23	68					1				25	4	5	1	6	1		
4HQ5	4	5	55					1	5BQ7	5	8	54					1	5HZ6	5	1	83					1		
4HR8	4	39	33	4	5	2	9	1				54					2	5J6	5	2	60					1		
4HS8	4	21	99					1	5BR8	5	14	72					1				60					2		
			99					2				55					2	5JK6	5	1	61					1		
4HT6	4	9	60					1	5BS8	5	8	54					1	5JL6	5	1	23					1		
4JC6	4	9	65					1				54					2	5JW8	5	11	80					1		
4JC6A	4	9	59					1	5BT8	5	39	33	5	4	12	8	1				85					2		
4JD6	4	9	61					1				54	5	4	12	1	1	5KD8	5	11	68					1		
4JH6	4	1	64					1				54	5	4	12	2	1				52					2		
4JK6	4	1	61					1	5BW8	5	39	33	5	4	2	6	1	5KE8	5	11	88					1		
4JL6	4	1	23					1				34	5	4	7	1	1				53					2		
4JW8	4	11	80					1				34	5	4	7	3	1	5KZ8	5	39	26	4	5	12	2	1		
			85					2	5BZ7	5	8	53					1				26	4	5	12	9	1		
4KE8	4	11	88					1				53					2	5LJ8	5	14	85					1		
			53					2	5CG8	5	14	73					1				60					2		
4KF8	4	21	92					1				57					2	5MB8	5	14	84					1		
			92					2	5CL8	5	14	69					1				61					2		
4KN8	4	39	86	4	5	12	1	1				51					2	5MF8	5	36	35	1	12	6	7	1		
			90	4	5	12	6	1	5CM6	5	16	64					1				34	1	12	6	10	1		
4KT6	4	9	52					1	5CM8	5	39	33	5	4	12	2	1	5M-HH3	5	2	56					1		
4LJ8	4	14	85					1				38	5	4	12	9	1				56					2		
			60					2	5CQ8	5	11	72					1	5M-K9	5	41	30	3	4	12	5	1		
4LU6	4	1	52					1				55					2	5MQ8	5	11	65					1		
4MK8	4	21	98					1	5CR8	5	39	*32	5	4	12	2	1				66					2		
			98					2				*34	5	4	12	9	1	5N1039A	6	1	63					1		
4M-P12	4	1	60					1	*Normally shows short position 8.										5P-29	6	29	*62						1
4M-P26	4	7	81					1	5CU4	5	38	28	8	2	12	4	1	*For plate cap, use jack next to socket 26										
4R-HH2	4	8	53					1				28	8	2	12	6	1	5R4	5	33	22					1		
			53					2	5CZ5	5	16	60					1				22					2		
4R-HH8	4	39	86	4	5	12	1	1	5DB4	5	33	16					1	5RDDH1	5	39	41	5	4	12	8	1		
			90	4	5	12	6	1				16					2				35	5	4	12	1	1		
4RHH15	4	8	53					1	5DH8	5	14	61					1				33	5	4	12	6	1		
			53					2				73					2	5R-HP1	4	11	66					1		
5AF4	5	41	*24	4	3	2	6	1	5DJ4	5	33	16					1				55					2		
*Normally shows short position 1-7.												16					2	5R-HR1	5	11	52					1		
5AF11	5	36	31	1	12	12	11	1	5EA8	5	11	71					1				55					2		
			31	1	12	12	6	1				56					2	5R-K16	5	39	27	4	5	12	1	1		
			35	1	12	12	3	1	5EH8	5	12	71					1				27	4	5	12	8	1		
5AM8	5	39	30	5	4	12	2	1				54					2	5T4	5	33	16					1		
			30	5	4	12	8	1	5ES8	5	8	30					1				16					2		
5AN8	5	13	62					1				30					2	5T8	5	17	90					1		
			61					2	5EU8	5	39	32	5	4	12	7	1				63					2		
5AQ5	5	3	77					1				32	5	4	12	2	1	5U4	5	33	16					1		
5AR4	5	33	10					1	5EW6	5	1	77					1				16					2		
			10					2	5FG7	5	14	68					1	5U8	5	11	79					1		
5AS4	5	33	17					1				56					2				55					2		
			17					2	5FV8	5	14	65					1	5U9	5	42	28	5	6	12	3	1		
5AS8	5	39	31	5	4	12	2	1				54					2				32	5	6	12	10	1		
			32	5	4	12	6	1	5GH8	5	11	68					1	5V3	5	33	15					1		
5AT8	5	14	77					1				56					2				15					2		
								2									1	5V4	5	33	12					1		
5FU4	5	33	16					1	5GH8A	5	11	68					1				12					2		
			16					2				56					2	5V6	5	29	79					1		
5AV8	5	39	40	4	5	6	2	1	5GJ7	5	22	62					1	5V9	5	42	31	5	6	12	3	1		
			34	4	5	1	6	1				78					2				30	5	6	12	8	1		
5AW4	5	33	17					1	5GM6	5	1	64					1				30					1		
			17					2	5GS7	5	14	80					1	5W4	5	33	32					1		
5AZ4	5	37	53	8	2	12	4	1				53					2				32					2		
			53	8	2	12	6	1	5GX6	5	1	85					1	5X4	5	38	47	8	7	12	3	1		
			30	4	5	6	2	1	5GX7	5	22	76					1	5X8	5	12	73					1		
								1				73					2									1		
			28	4	5	1	6	1	5HA7	5	36	35	1	12	5	9	1				61					2		
			*33	1	3	6	5	1				35	1	12	5	11	1	5X9	5	42	30	5	6	12	3	1		
								1	5HB7	5	22	75					1				30					1		
								1				75					2	5Y3	5	33	32					1		
								1				75					2				32					1		
Normally shows short position 2-3-8-9.																												
*Normally shows short position 2-3-5-6.																												

Normally shows short position 2-3-8-9.

*Normally shows short position 2-3-5-6.

*Normal Shorts refer to position of "D" Switch.

3 4HG8-5Y3

B & K DYNA-JET MODEL 707 TUBE CHART

Page 4

TUBE TYPE	Heater	Socket	Sensitiv-ity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensitiv-ity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensitiv-ity	A	B	C	D	Test Pos.
5Y4	5	38	52	8	7	12	3	1	6AL5	6	41	33	3	4	12	2	1	6AX7	6	8	*85					1
5Z4	5	33	12	8	7	12	5	1	6AL9	6	36	28	1	12	12	5	1				*85					2
5Z10	5	33	16					2	6AL11	6	36	31	1	12	12	3	1	6AX8	6	11	73					1
6A8	6	38	45	7	2	1	5	1	6AM4	6	39	*96	8	7	1	5	1				*Tube good if it reads 22 or more.					2
6AB4	6	2	83					1										6AY3	6	44	27	5	4	7	2	1
6AB7	6	30	74					1	*Normally shows short position 3-4-6-9.	6	41	34	4	3	12	1	1	6AY3B	6	44	27	5	4	7	2	1
6AB8	6	39	37	5	4	12	9	1	6AM5	6	41	30	4	3	12	1	1	6AY11	6	36	30	1	12	12	5	1
6AB9	6	42	44	5	4	12	2	1	6AM6	6	41	30	4	3	12	1	1				30	1	12	12	3	1
6AC5	6	38	79	5	6	10	2	1	6AM8	6	39	30	5	4	12	2	1	6AZ8	6	39	30	1	12	12	10	1
6AC7	6	30	79	5	6	4	8	1	6AN4	6	41	*30	5	4	12	8	1				32	5	4	12	6	1
6AC9	6	36	40	7	2	12	5	1	*May show short position 1-7.	6	1	26	4	3	2	6	1	6B4	6	38	35	7	2	12	5	1
6AC10	6	36	60					1	6AN5	6	41	52	7	1	12	2	1	6B6	6	38	37	7	2	12	10	1
6AD7	6	38	45	1	12	3	2	1	6AN6	6	41	52	7	1	12	3	1				58	7	2	12	4	1
6AD10	6	36	35	1	12	2	3	1	6AN8	6	13	52	7	1	12	4	1	6B8	6	38	55	7	2	12	10	1
6AF3	6	15	32	1	12	12	11	1												65	7	2	12	5	1	
6AF4	6	41	*24	4	3	2	6	1	6AQ4	6	41	*29	4	3	6	1	1	6B10	6	36	34	1	12	12	3	1
*Normally shows short position 1-7.								1												34	1	12	12	5	1	
6AF9	6	42	27	5	6	7	1	1	6AQ5	6	3	77					1			34	1	12	12	10	1	
6AF11	6	36	27	5	6	2	8	1	6AQ6	6	6	89					1			34	1	12	12	10	1	
6AG5	6	1	31	1	12	12	11	1	6AQ7	6	38	80					2			33	3	4	12	2	1	
6AG7	6	30	31	1	12	12	6	1	6AQ8	6	8	45	8	7	12	4	1	6B32	6	41	33	3	4	12	2	1
6AG9	6	36	35	1	12	12	3	1												33	3	4	12	7	1	
6AG11	6	36	80					1	6AR5	6	3	58	8	7	12	3	1	6BA3	6	44	33	4	5	7	2	1
			38					1	6AR6	6	38	70					2			6	1	78			1	
6AH4	6	38	33	7	2	12	1	1	6AR8	6	39	91					1			6BA6	6	1				1
6AH6	6	1	58					1	6AR11	6	36	33	8	6	12	7	1	6BA7	6	39	33	5	4	12	2	1
6AH7	6	38	48	8	7	12	1	1	6AS5	6	4	55					1			6BA8	6	12	53			1
6AH9	6	36	48	8	7	12	5	1	6AS6	6	1	77					1			59					2	
6AJ4	6	39	33	1	12	12	3	1	6AS7	6	38	35	8	7	12	1	1	6BA11	6	36	29	1	12	12	4	1
*Normally shows short position 3-4-6-9.								1	6AS8	6	39	31	5	4	12	2	1				37	1	12	12	9	1
6AJ5	6	41	37	2	12	1	1	1	6AS11	6	36	32	5	4	12	6	1	6B-B14	6	44	*33	4	1	2	1	
6AJ7	6	30	48	8	7	12	1	1																	1	
6AJ8	6	39	48	8	7	12	5	1	6AT6	6	6	32	5	4	12	2	1	6BC4	6	40	30	5	4	3	7	1
6AJ9	6	42	48	8	7	12	5	1	6AT8	6	14	32	1	12	12	11	1	6BC5	6	1	74					1
6AK5	6	1	32	1	12	12	11	1	6AU4	6	34	32	1	12	12	6	1	6BC7	6	39	32	5	4	12	2	1
6AK6	6	1	32	1	12	12	9	1	6AU5	6	28	32	5	4	12	2	1				32	5	4	12	6	1
6AK7	6	30	32	1	12	12	7	1	6AU6	6	1	32	5	4	12	6	1	6BC8	6	8	53					1
6AK8	6	17	32	1	12	12	9	1	6AU7	6	8	32	1	12	12	6	1	6BC32	6	6	53					2
6AK9	6	36	32	1	12	12	9	1	6AU8	6	12	32	1	12	12	3	1				91					1
6AK10	6	36	32	1	12	12	9	1												78					2	
6AL3*	6	40	32	1	12	12	11	1	6AV5	6	28	85					1	6BD5	6	38	29	7	2	12	1	1
*If no test, use alternate settings.								1	6AV6	6	6	78					2	6BD6	6	1	85					1
6AL3	6	40	30	5	4	3	7	1	6AV11	6	36	30	1	12	12	7	1	6BD11	6	36	26	1	12	12	11	1
								1												31	1	12	12	3	1	
								1	6AW8	6	12	30	1	12	12	9	1				31	1	12	12	6	1
								1	6AX2	6	24	30	1	12	12	11	1	6BE3	6	36	26	1	12	4	10	1
								1	6AX3	6	36	30	1	12	10	4	1	6BE6	6	1	91					1
								1	6AX4	6	34	13					1	6BE7	6	39	33	5	4	3	7	1
								1	6AX5	6	38	44	7	2	1	5	1	6BE8	6	14	72					1
								1												80						2
								1												40						1
								1												85						1
								1												80						2
								1												25	4	5	12	1	1	
								1												25	4	5	12	3	1	
								1												25	4	5	12	7	1	
								1												25	4	5	12	8	1	
								1												25	4	5	12	9	1	
								1												25	4	5	12	9	1	
								1												25	4	5	12	9	1	
								1												25	4	5	12	9	1	
								1												25	4	5	12	9	1	
								1												25	4	5	12	9	1	
								1												25	4	5	12	9	1	
								1												25	4	5	12	9	1	
								1												25	4	5	12	9	1	
								1												25	4	5	12	9	1	
								1												25	4	5	12	9	1	
								1												25	4	5	12	9	1	
								1												25	4	5	12	9	1	
								1												25	4	5	12	9	1	
								1												25	4	5	12	9	1	
								1												25	4	5	12	9	1	
								1												25	4	5	12	9	1	
								1												25	4	5	12	9	1	
								1												25	4	5	12	9	1	
								1												25	4	5	12	9	1	
								1												25	4	5	12	9	1	
								1												25	4	5	12	9	1	
				</																						

*Normal Shorts refer to position of "D" Switch.

◆Use TC-80 Adapter

4 5Y4-6BH3A

B & K DYNA-JET MODEL 707 TUBE CHART

Page 5

TUBE TYPE	Heater	Socket	Sensi- tivity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensi- tivity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensi- tivity	A	B	C	D	Test Pos.		
6BH6	6	1	89					1	6BW6	6	39	42	4	5	1	2	1	6CJ3	6	44	25	4	5	7	2	1		
6BH8	6	12	59					1	6BW7	6	9	76					1	6CJ6	6	39	*32	5	4	7	2	1		
			54					2	6BW8	6	39	33	5	4	2	6	1	*Normally shows short position 1-6-9.										
6BH11	6	36	27	1	12	12	4	1				34	5	4	7	1	1	6CK3	6	44	25	4	5	7	2	1		
			27	1	12	12	6	1				34	5	4	7	3	1	6CK4	6	38	34	7	2	1	3	1		
			27	1	12	12	8	1	6BW11	6	36	30	1	12	12	3	1	6CK6	6	39	30	5	4	12	2	1		
6BJ3	6	36	26	1	12	4	10	1				30	1	12	12	11	1	6CL3	6	44	27	4	5	2	7	1		
6BJ6	6	1	81					1	6BX6	6	9	76					1	6CL5	6	26	54					1		
6BJ7	6	39	33	5	4	12	2	1	6BX7	6	25	55					2	6CL6	6	39	*32	5	4	2	9	1		
			33	5	4	12	6	1				55						*Normally shows short position 3-8.										
			33	5	4	12	8	1	6BX8	6	39	33	5	4	12	2	1	6CL8	6	14	69					1		
6BJ8	6	39	38	5	4	12	8	1				33	5	4	12	7	1				51				2			
			34	5	4	12	1	1	6BY5	5	38	38	7	2	12	4	1	6CM3	6	44	30	4	5	2	7	1		
			34	5	4	12	6	1				38	7	2	12	5	1	6CM4	6	40	29	4	5	3	6	1		
6BK4A	6	38	78	7	2	6	5	1	6BY6	6	1	93					1	6CM5	6	27	58					1		
6BK4A	6	38	78	7	2	6	5	1	6BY7	6	9	62					1	6CM6	6	16	64					1		
6BK4B	6	38	78	7	2	6	5	1	6BY8	6	39	34	5	4	12	1	1	6CM7	6	19	80					1		
6BK5	6	10	53					1				34	5	4	12	6	1				94				2			
6BK6	6	6	86					1	6BY11	6	36	32	1	12	12	3	1	6CM8	6	39	33	5	4	12	2	1		
			70					2				32	1	12	12	8	1				38	5	4	12	9	1		
6BK7	6	8	55					1	6BZ3	6	36	30	1	12	4	10	1	6CN6	6	29	*62					1		
			55					2	6BZ6	6	1	61					1	*For Plate Cap Use Jack Next to Socket 26.										
6BK11	6	36	35	1	12	12	7	1	6BZ7	6	8	53					1	6CN7	6	18	94					1		
			35	1	12	12	9	1				53					2				60				2			
			35	1	12	12	11	1	6BZ8	6	8	55					1	6CQ4	6	34	11					1		
6BL4	6	34	10					1				55					2	6CQ6	6	41	35	4	3	12	1	1		
6BL7	6	25	57					2	6C4	6	41	41	4	3	1	6	1	6CQ8	6	11	72					1		
			57					2	6C5	6	29	99					1				55				2			
6BL8	6	11	66					2	6C8	6	38	48	7	2	12	5	1	6CR6	6	41	39	4	3	12	7	1		
			55					2				48	7	2	12	10	1				61	4	3	12	2	1		
6BM8	6	39	33	5	4	12	3	1	6C9	6	39	28	5	4	6	1	1	6CR8	6	39	*32	5	4	12	2	1		
			39	5	4	12	1	1				28	5	4	10	7	1				*34	5	4	12	9	1		
6BN4	6	41	*33	4	3	2	7	1	6C10	6	36	42	1	12	12	7	1	*Normally shows short position 8.										
*Normally shows short position 1-6.												42	1	12	12	9	1	6CS6	6	1	94					1		
6BN5	6	39	*39	5	4	1	2	1				42	1	12	12	11	1	6CS7	6	20	96					1		
*Normally shows short position 6-8.									6C16	6	11	66					1				95				2			
6BN6	6	7	75					1				55					2	6CT3	6	39	32	4	5	6	2	1		
6BN8	6	39	35	5	4	12	8	1	6C18	6	39	30	4	5	8	7	1	6CU5	6	4	47					1		
			35	5	4	12	1	1				33	4	5	8	9	1	6CU6	6	27	69					1		
			35	5	4	12	6	1	6C31	6	41	*80	4	3	1	7	1	6CU8	6	39	32	5	4	1	7	1		
6BN11	6	36	29	1	12	12	3	1	*Normally shows short position 5-6.												33	5	4	6	8	1		
			29	1	12	12	7	1	6CA4	6	39	34	5	4	12	1	1	6CW4	6	43	*87	10	12	12	2	1		
6BQ5	6	23	68					1				34	5	4	12	7	1	*For grid emission turn D switch to position 4.										
6BQ6	6	27	69					1	6CA5	6	4	55					1	6CW5	6	23	58					1		
6BQ7	6	8	54					1				55					1	6CW7	6	39	33	5	4	7	2	1		
			54					2	6CA7	6	29	53					1				33	5	4	7	6	1		
6BR3	6	15	10					1	6CA11	6	36	35	1	12	8	3	1	6CX8	6	12	45					1		
6BR8	6	14	72					1				33	1	12	8	6	1				67				2			
			55					2				33	1	12	7	8	1	6CY5	6	1	54					1		
6BS3	6	44	27	4	5	2	7	1	6CB5	6	26	43					1	6CY7	6	39	31	5	4	2	3	1		
6BS3A	6	44	27	4	5	2	7	1	6CB6	6	1	64					1				45	5	4	2	7	1		
6BS8	6	8	54					1	6CCYZ	6	39	29	9	1	12	3	1	6D1	6	41	43	4	3	1	6	1		
			54					2				29	9	1	12	7	1	6D2	6	41	33	3	4	12	2	1		
6BT6	6	6	85					1	6CC31	6	2	60					1				33	3	4	12	7	1		
			78					2				60					2				33	3	4	12	7	1		
6BT8	6	39	33	5	4	12	8	1	6CD3	6	36	*27	1	12	4	10	1	6D4	6	41	43	4	3	12	1	1		
			54	5	4	12	1	1	*Some tubes may show short position 5-6-8-9.												6D8	6	38	43	7	2	5	1
			54	5	4	12	2	1	6CD6	6	26	53					1	6D10	6	36	32	1	12	12	7	1		
6BU6	6	6	85					1	6CE3	6	36	25	1	12	4	10	1				32	1	12	12	9	1		
			80					2	6CE5	6	1	62					1				32	1	12	12	11	1		
6BU8	6	21	92					1	6CF6	6	1	60					1	6DA4	6	34	11					1		
			92					2	6CG3	6	36	30	1	12	4	10	1	6DA6	6	9	80					1		
6BV8	6	39	31	5	4	12	2	1	6CG7	6	8	76					1	6DB5	6	16	30					1		
			33	5	4	12	6	1				76					2	6DB6	6	1	87					1		
			33	5	4	12	9	1	6CG8	6	14	73					1	6DC6	6	1	67					1		
6BV11	6	36	30	1	12	12	6	1				57					2	6DC8	6	39	33	5	4	12	2	1		
			30	1	12	12	7	1	6CH3	6	44	29	4	5	7	2	1				60	5	4	12	7	1		
6BW3	6	36	28	1	12	4	10	1	6CH6	6	9	55					1				60	5	4	12	8	1		
6BW4	6	39	50	5	4	12	1	1	6CH8	6	39	33	5	4	12	7	1	6DE4	6	34	13					1		
			50	5	4	12	7	1				36	5	4	12	8	1	6DE6	6	1	61					1		

*Normal Shorts refer to position of "D" Switch.

▲ Use TC-75 Adapter

5 6BH6-6DE6

TUBE TYPE	Heater	Socket	Sens- itivity	A	B	C	D	Test Pos.
6DE7	6	20	81 90					1 2
6DG6	6	29	38					1
6DJ8	6	39	31 31	5	4	12	2	1 1
6DK3	6	44	31	4	5	2	7	1
6DK6	6	1	61					1
6DL3	6	44	29	4	5	7	2	1
6DL4	6	39	*85	4	5	7	8	1
*Normally shows short position 1-3-6-9.								
6DL5	6	3	88					1
6DM4	6	34	11					1
6DN3	6	44	31	4	5	2	7	1
6DN6	6	26	47					1
6DN7	6	25	56					1
			77					2
6DQ3	6	36	30	1	12	4	10	1
6DQ4	6	34	11					1
6DQ5	6	26	55					1
6DQ6	6	27	65					1
6DQ6B	6	27	62					1
6DR4	6	41	43	4	3	1	6	1
6DR7	6	39	32	4	5	2	3	1
			40	4	5	2	7	1
6DR8	6	39	31	5	4	12	2	1
			62	5	4	12	7	1
			62	5	4	12	8	1
6DS4	6	43	*87	10	12	12	2	1
*For grid emission turn D switch to position 4.								
6DS5	6	3	76					1
6DS8	6	39	30	5	4	12	2	1
			34	5	4	12	9	1
6DT3	6	36	31	1	12	4	10	1
6DT4	6	34	11					1
6DT5	6	16	45					1
6DT6	6	1	91					1
6DT8	6	8	71					1
			71					2
6DU3	6	36	30	1	12	4	10	1
6DW4	6	44	27	4	5	2	7	1
6DW5	6	16	30					1
6DX4	6	41	*62	3	4	1	7	1
*Normally shows short position 2-6.								
6DX8	6	39	26	4	5	12	8	1
			26	4	5	12	1	1
6DY4	6	41	*24	4	3	2	6	1
*Normally shows short position 1-7.								
6DY5	6	23	68					1
6DZ4	6	41	*31	3	4	6	2	1
*Normally shows short position 1-7.								
6DZ7	6	38	40	7	2	12	1	1
			40	7	2	12	5	1
6DZ8	6	39	27	4	5	8	3	1
			30	4	5	2	1	1
6E8	6	38	45	7	2	1	5	1
6EA4*	6	36	80	1	12	6	4	1
*Insert a 2.7K 1W 5% resistor from pin hole No. 4 to No. 6 of socket No. 37, remove resistor after test is completed.								
*Normally shows short position 2-5-9-11.								
6EA5	6	1	80					1
6EA7	6	38	35	8	7	12	1	1
			39	8	7	12	4	1
6EA8	6	11	71					1
			56					2
6EB5	6	41	53	3	4	12	2	1
			53	3	4	12	7	1
6EB8	6	12	35					1
			99					2
6EC4	6	38	32	7	8	2	5	1

TUBE TYPE	Heater	Socket	Sens- itivity	A	B	C	D	Test Pos.
6ED4	6	44	*52	4	5	12	8	1
*Normally shows short position 2-3-6-7-9.								
6EF4*	6	36	76	1	12	6	4	1
*Insert a 2.7K 1W 5% resistor from pin hole No. 4 to No. 6 of socket No. 37, remove resistor after test is completed.								
*Normally shows short position 2-9.								
6EH4*	6	36	80	1	12	6	4	1
*Insert a 2.7K, 1w., 5% resistor from pin hole #4 to #6 of socket #37. Remove resistor after test is completed.								
*Normally shows short position 2-5-9-11.								
6EH5	6	4	57					1
6EH7	6	9	40					1
6EH8	6	12	71					1
			54					2
6EJ4*	Use 6EF4 settings. May show short position 2-9-11.							
6EJ7	6	9	58					1
6EL4	6	38	78	7	2	6	5	1
6EM5	6	16	53					1
6EM7	6	38	32	8	7	12	1	1
			45	8	7	12	4	1
6EN4	6	38	*40	7	2	6	5	1
*Normally shows short position 1-3-4-8.								
*Tube good if it reads 40 or more.								
6EQ7	6	39	34	5	4	12	2	1
			71	5	4	12	8	1
6ER5	6	41	33	4	3	1	2	1
6ES5	6	41	33	4	3	1	2	1
6ES8	6	8	30					2
			30					1
6ET6	6	41	30	4	3	12	1	1
6ET7	6	39	30	5	4	12	7	1
			70	5	4	12	2	1
			70	5	4	12	3	1
6EU7	6	39	35	2	1	12	5	1
			35	2	1	12	8	1
6EU8	6	39	32	5	4	12	7	1
			32	5	4	12	2	1
6EV5	6	1	57					1
6EV7	6	8	78					2
			78					1
6EW6	6	1	77					1
6EW7	6	20	87					1
			92					2
6EX6	6	26	42					1
6FY6	6	29	65					1
6EZ5	6	29	65					1
6EZ8	6	39	33	5	4	12	2	1
			33	5	4	12	7	1
6F5	6	38	40	7	2	1	10	1
6F6	6	29	91					1
6F8	6	38	45	7	2	12	5	1
			45	7	2	12	10	1
6F10	6	30	60					1
6F21	6	41	35	4	3	12	1	1
6F22	6	39	40	5	4	2	9	1
6F29	6	9	40					1
6F31	6	1	78					1
6F33	6	1	77					1
6F36	6	1	58					1
6F40	6	39	39	5	4	2	9	1
6FA7	6	39	33	5	4	12	7	1
			65	5	4	12	3	1
6FC7	6	39	29	4	5	7	2	1
			29	4	5	7	6	1
6FD6	6	41	26	3	4	2	1	1
6FD7	6	39	25	4	5	2	3	1
			32	4	5	2	7	1

TUBE TYPE	Heater	Socket	Sens- itivity	A	B	C	D	Test Pos.
6FE5	6	29	37					1
6FG5	6	41	31	4	3	2	1	1
6FG7	6	14	68					1
			56					2
6FH5	6	41	33	4	3	1	2	1
6FH8	6	39	32	5	4	12	6	1
			32	5	4	12	2	1
6FJ7	6	36	36	1	12	12	3	1
			44	1	12	12	10	1
6FM7	6	36	25	1	12	3	8	1
			36	1	12	3	10	1
6FM8	6	39	47	5	4	12	8	1
			34	5	4	12	2	1
			34	5	4	12	6	1
6FQ5	6	41	33	4	3	1	2	1
6FQ5A	6	41	31	4	3	1	2	1
6FQ7	6	8	68					1
			68					2
6FR7	6	39	24	4	5	2	3	1
			32	4	5	2	7	1
6FS5	6	1	99					1
6FV6	6	1	54					1
6FV8	6	14	65					1
			64					2
6FW5	6	28	57					1
6FW8	6	8	30					1
			30					2
6FY5	6	41	33	4	3	1	2	1
6FY7	6	36	25	1	12	12	3	1
			42	1	12	12	10	1
6FY8	6	39	30	4	5	12	3	1
			39	4	5	12	1	1
6G6	6	29	94					1
6G11	6	36	33	1	12	12	3	1
			31	1	12	12	8	1
6G-B3A	6	27	65					1
6GB5	6	44	*25	4	5	2	1	1
*Normally shows short position 3-6-7-8.								
6G-B6	6	27	64					1
6G-B7	6	27	58					1
6GB9	6	27	64					1
6GC5	6	16	26					1
6GC6	6	26	52					1
6GD7	6	14	74					1
			63					2
6GE5	6	36	*24	1	12	11	3	1
*Normally shows short position 4-10.								
6GE8	6	39	33	5	4	12	8	1
			33	5	4	12	3	1
6GF5	6	36	*24	1	12	11	3	1
*Normally shows short position 4-10.								
6GF7	6	44	27	4	5	12	2	1
			38	4	5	12	9	1
6GF7A	6	44	27	4	5	12	2	1
			38	4	5	12	9	1
6GH8	6	11	68					1
			56					2
6GH8A	6	11	68					1
			56					2
6GJ5	6	35	65					1
6GJ5A	6	35	65					1
6GJ7	6	22	62					1
			78					2
6GJ8	6	11	70					1
			53					2
6GK5	6	41	25	4	3	1	2	1
6GK6	6	9	40					1
6G-K17	6	34	12					1
6GL7	6	25	54					1
			98					1

TUBE TYPE	Heater	Socket	Sensi- tivity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensi- tivity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensi- tivity	A	B	C	D	Test Pos.
6GM5	6 39	*26	4 5 2 6	1				1	6HJ7	6 39	*78	4 5 1 7	1				1	6JG5	6 12	29						1
		*May show short position 3-8.										30	4 5 1 9	1			1	6JG6	6 35	56						1
6GM6	6 1	64						1	*For grid omission turn D switch to position 2.	6HJ8	6 39	29	5 4 12 2	1			1	6JG6A	6 35	56						1
6GM8	6 39	33	5 4 12 2	1				1				31	5 4 12 8	1			1	6JH5	6 36	*32	1 12 11 2					1
		33	5 4 12 7	1														*Normally shows short position 3-7-8-10.								
6GN7	6 9	21						1	6HK5	6 5	56						1	6JH6	6 1	64						1
6GN8	6 12	36						1	6HL5	6 39	30	4 5 1 2	1				1	6JH8	6 39	26	4 5 12 6					1
		98						2	6HL8	6 11	60						1	6JK5	6 36	*32	1 12 11 2					1
6GQ7	6 39	24	4 5 3 2	1				1			60						2	*Normally shows short position 3-7-8-10.								
		24	4 5 3 6	1				1	6HM5	6 5	57						1	6JK6	6 1	61						1
		24	4 5 3 8	1				1	6HM6	6 9	68						1	6JK8	6 8	54						1
6GS7	6 14	80						1	6HQ5	6 5	55						1		55							2
6GS8	6 21	95						1	6HR5	6 3	77						1	6JL6	6 1	23						1
		95						2	6HR6	6 1	71						1	6JL8	6 12	40						1
		95							6HS5	6 36	*30	1 12 11 2	1				1		70						2	
6GT5	6 35	63						1	*Normally shows short position 3-10.									6JM6	6 36	26	1 12 4 5					1
6GT5A	6 35	63						1	6HC6	6 1	66						1	6JN6	6 36	27	1 12 4 11					1
6GU5	6 41	27	3 4 2 1	1				1	6HS8	6 21	99						2	6JN8	6 14	67						1
6GU7	6 8	56						2			99								53							2
		56							6HT5	6 36	*52	1 12 2 6	1				1	6JQ6	6 39	*34	4 5 8 7					1
6GV5	6 36	*26	1 12 5 9	1				1	*May show short position 4-7-9-11.										*57	4 5 8 6						1
*Normally shows short position 3-4-7-10-11.									6HT6	6 9	60						1	*May show short position 2-3.								
6GV7	6 39	30	4 5 8 7	1				1	6HU6	6 39	52	4 5 2 1	1				1	6JR6	6 35	50						1
		33	4 5 8 9	1				1	6HU8	6 39	29	4 5 12 2	1				1	6JS6	6 36	*29	1 12 9 5					1
6GV8	6 39	25	4 5 12 9	1				1			29	4 5 12 6	1				1	*Normally shows short position 3-4-10-11.								
		25	4 5 12 2	1				1	6HV5	6 36	*33	1 12 2 11	1				1	6JT6	6 35	65						1
6GW5	6 41	29	3 4 6 2	1				1	*Normally shows short position 3-10.									6JT6A	6 35	65						1
6GW6	6 27	62						1	6HW8	6 39	32	4 5 12 6	1				1	6JT8	6 12	20						1
6GW8	6 39	25	4 5 2 8	1				1	6HZ5	6 36	*30	1 12 2 11	1				1		*99							2
		35	4 5 7 1	1				1	*Normally shows short position 3-10										*Tube good if reads 60 or more.							
6GX6	6 1	85						1	6HZ6	6 1	83						1	6JU6	6 35	55						1
6GX7	6 22	76						1	6HZ8	6 12	28						1	6JU8	6 39	*32	4 5 2 1					1
		73						2			75						2		*32	4 5 8 7						1
6GY5	6 36	*25	1 12 5 9	1				1	6J4	6 41	*85	4 3 1 7	1				1	*Normally shows short position 8.								
*Normally shows short position 3-4-7-10-11.																		**Normally shows short position 2.								
6GY6	6 1	82						1	6J5	6 29	93						1	6JU8A	6 39	*32	4 5 2 1					1
6GY8	6 39	*32	5 4 12 1	1				1	6J6	6 2	60						1		*32	4 5 8 7						1
		*32	5 4 12 3	1				1			60						2	*Normally shows short position 8.								
		*94	5 4 12 6	1				1	6J7	6 38	50	7 2 1 10	1				1	**Normally shows short position 2.								
*Normally shows short position 4.									6J9	6 39	26	4 5 12 2	1				1	6JV8	6 12	55						1
6GZ5	6 41	30	3 4 2 5	1				1			26	4 5 12 9	1				1		85							2
6H6	6 38	48	7 2 1 3	1				1			26	4 5 12 7	1				1	6JW8	6 11	80						1
		48	7 2 1 5	1				1	6J10	6 36	96	1 12 12 6	1				1		85							2
6H31	6 1	91						1	6J11	6 36	22	1 12 12 11	1				1	6JX8	6 22	88						1
6HA5	6 5	56						1			22	1 12 12 5	1				1		93							2
6HA6	6 9	23						1										6JY8	6 12	40						1
6HB5	6 36	*25	1 12 11 3	1				1	6JA5	6 36	*33	1 12 9 2	1				1		55							2
*Normally shows short position 4-10.									*Normally shows short position 3-4-10-11.									6JZ6	6 36	*31	1 12 9 5					1
6HB6	6 9	20						1	6JA8	6 39	25	4 5 12 7	1				1	*Some tubes may show short position 3-4-10-11.								
6HB7	6 22	75						1			95	4 5 12 3	1				1	6JZ8	6 36	29	1 12 6 7					1
		75						2	6JB5	6 36	*35	1 12 9 2	1				1		40	1 12 6 10						1
6HC8	6 39	36	5 4 12 3	1				1	*Normally shows short position 3-4-10-11.									6K6	6 29	92						1
		38	5 4 12 1	1				1	6JB6	6 35	62						1	6K7	6 38	52	7 2 1 10					1
6HD5	6 36	*27	1 12 3 11	1				1	6JB6A	6 35	62						1	6K8	6 38	35	7 2 1 5					1
*Normally shows short position 4-5-9-10.									6JCS	6 36	*32	1 12 9 2	1				1	6K11	6 36	38	1 12 12 7					1
6HD7	6 39	30	4 5 1 2	1				1	*Normally shows short position 3-4-10-11										38	1 12 12 9						1
		30	4 5 1 9	1				1	6JC6	6 9	65						1		38	1 12 12 11						1
6HE5	6 36	*32	1 12 9 2	1				1	6JC6A	6 9	59						1	6KA8	6 39	26	4 5 12 6					1
*Normally shows short position 3-4-10-11.									6JC8	6 39	24	4 5 1 2	1				1		33	4 5 12 2						1
6HE7	6 36	27	1 12 10 2	1				1			24	4 5 1 8	1				1	6KD6	6 36	*26	1 12 9 5					1
		27	1 12 10 9	1				1	6JD5	6 36	*30	1 12 2 11	1				1	*Normally shows short position 3-4-10-11.								
6HF5	6 36	*25	1 12 9 5	1				1	*Normally shows short position 3-10									6KD8	6 11	68						1
*Normally shows short position 3-4-6-8-10-11.									6JD6	6 9	61						1		52							2
6HF8	6 12	27						1	6JE6A	6 35	59						1	6KE8	6 11	88						1
		80						2	6JE6B	6 35	59						1		53							2
6HG5	6 3	85						1	6JE6C	6 35	52						1	6KF8	6 21	92						1
6HG8	6 39	25	4 5 3 2	1				1	6JE8	6 12	56						1		92							1
		25	4 5 1 6	1				1			78						2	6KG6	6 44	*26	4 5 1 8					2
6HJ5	6 36	*27	1 12 3 11	1				1	6JF6	6 44	*26	4 5 2 6	1				1	*Normally shows short position 2-3-6-7.								
*Normally shows short position 4-5-9-10.																										

*Normal Shorts refer to position of "D" Switch.

◆Use TC-80 Adapter.

7 6GM5-6KG6

B & K DYNA-JET MODEL 707 TUBE CHART

Page 8

TUBE TYPE	Heater	Socket	Sensi-tivity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensi-tivity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensi-tivity	A	B	C	D	Test Pos.	
6KL8	6	39	31	4	5	12	2	1	6LQ6	6	35	52					1	6MV8	6	12	63					1	
			70	4	5	12	8	1	6LQ8	6	12	31					1				60					2	
6KM6	6	35	53					1				50					2	6MX8	6	44	27	4	5	12	2	1	
6KM8	6	39	31	4	5	12	7	1	6LR6	6	36	*32	1	12	9	5	1				39	4	5	12	9	1	
			75	4	5	12	3	1	*May show short position 3-4-7-10-11.									6MY8	6	36	27	1	12	6	7	1	
6KN6	6	36	*30	1	12	9	5	1	6LR8	6	44	31	4	5	12	2	1				27	1	12	6	10	1	
*Normally shows short position 3-4-10-11.												31	4	5	12	9	1	6N3	6	39	29	4	5	6	9	1	
6KN8	6	39	86	4	5	12	1	1	6LT8	6	39	27	4	5	7	9	1	6N7	6	38	47	7	2	1	4	1	
			90	4	5	12	6	1				32	4	5	1	6	1				47	7	2	1	5	1	
6KR8	6	12	22					1				32	4	5	1	8	1	6N8	6	39	37	5	4	12	2	1	
									6LU6	6	1	52					1				64	5	4	12	7	1	
6KR8A	6	12	22					1	6LU8	6	36	27	1	12	6	7	1				64	5	4	12	8	1	
			59					2				27	1	12	6	10	1	6NK7GT	6	30	84					1	
6KS6	6	7	83					1	6LV6	6	36	*31	1	12	5	9	1	6P5	6	29	93					1	
6KS8	6	12	33					1	*May show short position 3-4-7-10-11									6P15	6	23	68					1	
									6LW6	6	38	*31	7	8	1	5	1	6Q7	6	38	40	7	2	1	10	1	
6KT6	6	9	52					1	*Normally shows short position 2-6												63	7	2	1	4	1	
6KT8	6	12	67					1	6LX8	6	11	80					1				63	7	2	1	5	1	
			91					2				85					2	6Q8	6	38	45	7	2	1	5	1	
6KU8	6	39	22	4	5	12	7	1	6LY8	6	12	21					1	6Q11	6	36	38	1	12	12	7	1	
																	2				38	1	12	12	9	1	
			60	4	5	12	2	1	*Tube good if it reads 28 or more.												38	1	12	12	11	1	
			60	4	5	12	3	1	6LZ6	6	35	53					1	6R3	6	39	33	5	4	2	9	1	
6KV6	6	44	30	4	5	1	2	1	6M11	6	36	25	1	12	12	2	1	6R4	6	39	30	4	5	12	1	1	
6KV8	6	12	22					1				25	1	12	12	5	1	6R7	6	38	52	7	2	1	10	1	
			82					2													63	7	2	1	4	1	
6KW6	6	44	30	4	5	1	8	1	6MA6	6	38	*58	3	8	2	6	1		6R8	6	17	86				1	
6KY6	6	9	20					1	*Tube good if it reads 40 or more.												62					2	
6KY8	6	44	27	4	5	12	2	1	*No short test.												62						
6KY8A	6	44	27	4	5	12	2	1	6MB6	6	36	*32	1	12	9	5	1	6RA6	6	40	34	4	5	9	7	1	
									*Normally shows short position 3-4-10-11.									6R-A9	6	39	30	4	5	7	2	1	
6KZ8	6	39	26	4	5	12	2	1	6MB8	6	14	84					1	6R-B11	6	39	32	4	5	6	3	1	
			26	4	5	12	9	1				61				2		6R-HH2	6	8	53					1	
6L5	6	38	53	7	2	6	5	1	6MC6	6	35	46					1				53					2	
6L6	6	29	63					1	6MD8	6	44	35	4	5	12	6	1	6R-HH8	4	39	86	4	5	12	1	1	
6L7	6	38	44	7	2	1	10	1				35	4	5	12	8	1				90	4	5	12	6	1	
6L10	6	30	38					1	6ME6	6	35	53					1	6R-K19	6	15	10					1	
6L12	6	8	70					1	6ME8	6	39	30	4	5	12	6	1	6R-P15	6	39	35	4	5	1	2	1	
			70					2	6MF8	6	36	35	1	12	6	7	1	6R-P22	6	39	*32	4	5	2	9	1	
6L41	6	39	33	5	4	8	9	1									*Normally shows short position 3-8.										
6L43	6	39	*32	5	4	2	9	1	6MG8	6	11	34	1	12	6	10	1	6S2	6	24	35					1	
*Normally shows short position 3-8.												34	1	12	6	10	1	6S4	6	16	58					1	
6LB6	6	36	*30	1	12	9	5	1	6MH6	6	36	*31	1	12	5	9	1	6S7	6	38	47	7	2	1	10	1	
*Normally shows short position 3-4-10-11.									6M-H1	6	41	*85	4	3	1	7	1	6S8	6	38	45	8	7	5	10	1	
6LB8	6	12	21					1	*Normally shows short position 5-6												62	8	7	5	1	1	
									6MH6	6	36	*31	1	12	5	9	1				62	8	7	5	4	1	
6LC6	6	38	78	7	2	12	5	1	*May show short position 3-4-7-10-11									6SA7	6	38	37	7	2	1	5	1	
6LC8	6	39	24	4	5	3	6	1	6M-HH3	6	2	56					1	6SB7Y	6	38	34	7	2	1	5	1	
			24	4	5	6	2	1				56					2	6SC7	6	38	48	8	7	1	3	1	
6LD6	6	9	51					1	6MJ6	6	35	52					1				48	8	7	1	3	1	
6LD12	6	16	90					1	6MJ8	6	36	35	1	12	7	8	1										
			63					2				35	1	12	7	10	1	6SD7	6	30	69					1	
6LE8	6	39	29	4	5	12	9	1				35	1	12	7	11	1	6SF5	6	38	41	8	7	1	3	1	
6LF6	6	36	*31	1	12	5	9	1	6MK8	6	21	98					1	6SF7	6	38	46	8	7	1	2	1	
*May show short position 3-4-7-10-11.												98				2				69	8	7	1	5	1		
6LF8	6	12	55					1	6ML4	6	41	*24	4	3	2	6	1	6SG7	6	30	77					1	
			95					2	*Normally shows short position 1-7.									6SH7	6	30	77					1	
6LG6	6	36	*32	1	12	9	5	1	6ML8	6	39	34	4	5	12	6	1	6SJ7	6	30	83					1	
*May show short position 2-3-4-7-10-11.													4	5	12	8	1	6SK7	6	30	84					1	
6LH6	6	38	78	7	2	12	5	1				4	5	12	9	1	6SL7	6	25	*85					1
6LJ6	6	38	78	2	7	12	5	1	6MN8	6	36	33	1	12	7	8	1									2	
			95					2				33	1	12	7	10	1	*Tube good if it reads 22 or more.									
6LJ8	6	14	85					1				33	1	12	7	11	1	6SN7	6	25	78					1	
			60					2	6M-P17	6	3	90					1				78					2	
6LM8	6	11	68					1	6M-P18	6	41	34	3	4	7	1	1	6SQ7	6	38	42	8	7	1	2	1	
									6MP20	6	1	43					1				71	8	7	1	4	1	
6LN8	6	11	66					1	6MQ8	6	11	65					1				71	8	7	1	5	1	
			55					2				66					2				46	8	7	1	2	1	
6LP12	6	39	33	5	4	12	3	1	6MU8	6	11	42					1	6SR7	6	38	68	8	7	1	4	1	
			39	5	4	12	1	1									1				68	8	7	1	5	1	

B & K DYNA-JET MODEL 707 TUBE CHART

Page 9

TUBE TYPE	Heater	Socket	Sensi- tivity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensi- tivity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensi- tivity	A	B	C	D	Test Pos.
6SS7	6	38	46	7	2	1	4	1	7AF7	6	37	41	8	1	12	4	1	7X6	6	37	35	8	1	12	3	1
6ST7	6	38	52	8	7	1	2	1	7AG7	6	37	32	8	1	12	6	1	7X7	6	37	43	8	1	12	3	1
			72	8	7	1	4	1	7AH7	6	37	32	8	1	12	6	1				36	8	1	12	5	1
6SU7	6	38	43	8	7	12	1	1	7AK7	6	37	33	8	1	12	6	1				35	8	1	12	6	1
			43	8	7	12	4	1	7AN7	7	39	33	5	4	7	2	1	7Y4	6	37	45	8	1	12	3	1
6SZ7	6	38	44	8	7	1	2	1				33	5	4	7	6	1				45	8	1	12	6	1
			72	8	7	1	4	1	7AU7	7	8	75						7Z4	6	37	50	8	1	12	3	1
			72	8	7	1	5	1				75									50	8	1	12	6	1
6T4	6	41	*33	4	3	2	6	1	7B4	6	37	40	8	1	12	6	1	8A8	8	11	66					1
*Normally shows short position 1-7.									7B5	6	37	52	8	1	12	6	1	8AC9	8	36	28	1	12	3	9	1
6T8	6	17	90					1	7B6	6	37	40	8	1	4	3	1				45	1	12	3	2	1
			63					2				68	8	1	4	5	1				35	1	12	2	3	1
6T8A	6	17	90					1				68	8	1	4	6	1	8AC10	8	36	32	1	12	12	7	1
			63					2	7B7	6	37	45	8	1	12	6	1				32	1	12	12	9	1
6T9	6	36	27	1	12	12	8	1	7B8	6	37	42	8	1	12	4	1				32	1	12	12	11	1
			27	1	12	12	4	1	7C4	6	37	53	8	1	12	4	1	8AL9	8	36	28	1	12	12	5	1
6T10	6	36	28	1	12	12	3	1	7C5	6	37	38	8	1	12	6	1				28	1	12	12	11	1
			25	1	12	12	8	1	7C6	6	37	50	8	1	4	3	1	8AR11	8	36	28	1	12	12	5	1
6U4	6	34	11					1				68	8	1	4	5	1				28	1	12	12	10	1
6U6	6	29	54					1				68	8	1	4	6	1	8AU8	8	12	56					1
6U7	6	38	35	7	2	12	10	1	7C7	6	37	37	8	1	12	6	1				72					2
6U8	6	11	79					1	7D10	6	9	55						8AV11	8	36	30	1	12	12	7	1
			55					2	7DJ8	7	39	31	5	4	12	2	1				30	1	12	12	9	1
6U9	6	42	28	5	6	12	3	1				31	5	4	12	7	1				30	1	12	12	11	1
			32	5	6	12	10	1	7E5	6	37	*33	8	2	1	5	1	8AW8	8	12	44					1
6U10	6	36	32	1	12	12	7	1	*Normally shows short position 3-4-6-7.												78				2	
			32	1	12	12	9	1	7E6	6	37	40	8	1	4	3	1	8B8	8	39	33	4	5	12	3	1
			32	1	12	12	11	1				69	8	1	4	5	1				39	4	5	12	1	1
6V3	6	15	10					1				69	8	1	4	6	1	8B10	8	36	34	1	12	12	3	1
6V4	6	39	40	5	4	12	1	1	7E7	6	37	47	8	1	12	6	1				34	1	12	12	5	1
			40	5	4	12	7	1				68	8	1	12	3	1				34	1	12	12	8	1
6V6	6	29	79					1				68	8	1	12	4	1	8BA8	8	12	53					1
6V8	6	39	40	5	4	12	6	1	7ES8	7	8	30									59					2
			32	5	4	12	2	1				30														
			32	5	4	12	7	1	7EY6	7	29	65						8BA11	8	36	29	1	12	12	4	1
			61	5	4	12	9	1	7F7	6	37	45	8	1	12	4	1				37	1	12	12	9	1
6V9	6	42	31	5	6	12	3	1				45	8	1	12	5	1	8BH8	8	12	59					1
			30	5	6	12	8	1	7F8	6	37	30	7	2	12	1	1				54					2
6W4	6	34	11					1				30	7	2	12	8	1	8BM11	8	36	30	1	12	12	6	1
6W6	6	29	51					1	7FC7	7	39	29	4	5	7	2	1				30	1	12	12	11	1
6W7	6	38	50	7	2	12	10	1				29	4	5	7	6	1	8BN8	8	39	35	5	4	12	8	1
6X4	6	41	44	4	3	12	1	1	7G7	6	37	36	8	1	12	6	1				35	5	4	12	1	1
			44	4	3	12	6	1	7GS7	7	14	80						8BN11	8	36	29	1	12	12	3	1
6X5	6	33	15					1				53									29	1	12	12	7	1
			15					2	7GV7	7	39	30	4	5	8	7	1	8BQ5	8	23	68					1
6X6	6	38	48	7	2	12	3	1				33	4	5	8	9	1	8BQ7	8	8	54					1
			48	7	2	12	5	1	7H7	6	37	35	8	1	12	6	1				54					2
6X8	6	12	73					1	7HG8	7	39	25	4	5	3	2	1	8BQ11	8	36	28	1	12	12	5	1
			61					2				25	4	5	1	6	1				28	1	12	12	10	1
6X9	6	42	30	5	6	12	3	1	7J7	6	37	35	8	1	12	6	1	8BU11	8	36	28	1	12	12	8	1
			30	5	6	12	10	1				50	8	1	12	4	1				28	1	12	12	4	1
6Y6	6	29	40					1	7K7	6	37	45	8	1	12	4	1				28	1	12	12	6	1
6Y9	6	42	27	5	6	12	1	1				65	8	1	12	5	1	8CB11	8	36	28	1	12	12	5	1
			27	5	6	12	8	1				65	8	1	12	6	1				28	1	12	12	10	1
6Y10	6	36	29	1	12	4	3	1	7KY6	7	9	20						8CG7	8	8	76					1
			29	1	12	4	8	1	7KZ6	7	9	17									76					2
6Z10	6	36	30	1	12	12	11	1	7L7	6	37	36	8	1	12	6	1	8CH8	8	39	33	5	4	12	7	1
			95	1	12	12	6	1	7M-P18	7	41	34	3	4	7	1	1				36	5	4	12	8	1
6Z31	6	41	44	4	3	12	1	1	7N7	6	37	42	8	1	12	4	1	8CL8	8	14	69					1
			44	4	3	12	6	1				42	8	1	12	5	1				51					2
6ZY5	6	33	17					1	7Q7	6	37	35	8	1	12	4	1	8CM7	8	19	80					1
7A4	6	37	41	8	1	12	6	1	7R7	6	37	35	8	1	12	6	1				94					2
7A5	6	37	34	8	1	12	6	1				72	8	1	12	3	1	8CN7	8	18	94					1
7A6	6	37	48	8	1	12	3	1				72	8	1	12	4	1				60					2
			48	8	1	12	6	1	7S7	6	37	38	8	1	12	6	1	8CS7	8	20	96					1
7A																										

*Normal Shorts refer to position of "D" Switch.

9

6SS7-8CW5

B & K DYNA-JET MODEL 707 TUBE CHART

Page 10

TUBE TYPE	Heater	Socket	Sensi- tivity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensi- tivity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensi- tivity	A	B	C	D	Test Pos.	
8CX8	8	12	45 67					1 2	8R-HP1	8	39	33 39	4 4	5 5	12 12	3 1	1 1	9MN8	9	36	33 33	1 1	12 12	7 7	8 10	1 1	
8CY5	8	1	54					1	8R-LP1	8	39	35	4	5	12	1	1				33	1	12	7	11	1	
8CY7	8	39	31 45	5 5	4 4	2 2	3 7	1 1	8SN7	8	25	78	4	5	12	3	1	9M-P12	9	41	38	3	4	2	1	1	
																		9R-A6	9	40	34	4	5	9	7	1	
8D8	6	39	41	5	4	2	9	1				78					2	9R-AL1	9	39	33	4	5	2	3	1	
8DE7	8	20	81 90					1 2	8U9	8	42	28 32	5 5	6 6	12 12	3 10	1 1	9R-HR2	9	11	68 56					1 2	
8DX8	8	39	26 26	4 4	5 5	12 12	8 1	1 1	8X9	8	42	30 30	5 5	6 6	12 12	3 10	1 1	9U8	9	11	79 55					1 2	
8EB8	8	12	35 99					1 2	9A8	9	11	66 55					1 2	9V9	9	42	31 30	5 5	6 6	12 12	3 8	1 1	
8EM5	8	16	53					1	9AB4	9	2	83					1	9X8	9	12	73					1	
8ET7	8	39	30 70	5 5	4 4	12 12	7 2	1 1	9AH9	9	36	37 30	1 1	12 12	5 5	2 6	1 1	10AF11	10	36	61 31		12	12	11	1	1
			70	5	4	12	3	1	9AK8	9	16	90 63					1 2				31 35	1	12	12	6	1	
8FQ7	8	8	68 68					1 2	9AK10	9	36	32 32	1 1	12 12	12 12	7 9	1 1	10AL11	10	36	31 27	1	12	12	3	1	
8GJ7	8	22	62 78					1 2				32	1	12	12	11	1	10BQ5	10	23	68					1	
8GM6	8	1	64					1	9AM10	9	36	34 34	1 1	12 12	12 12	7 9	1 1	10C8	10	13	59 73					1	
8GN8	8	12	36 98					1 2	9AQ8	9	8	70 70					1 2	10CW5	10	23	58					2	
8GU7	8	8	56 56					1 2				70					1	10D2	19	41	33 33	3 3	4 4	12 12	2 7	1	
8GX7	8	22	76 73					1 2	9AU7	9	8	75 75					1 2	10DE7	10	20	81 90					1	
8HA6	8	9	23					1	9BJ11	9	36	28	1	12	12	6	1	10DR7	10	39	32	5	4	2	3	1	
8HG8	8	39	25 25	4 4	5 5	3 1	2 6	1 2	9BR7	9	39	32	5	4	9	2	1	10DX8	10	39	26	4	5	12	8	1	
8JE8	8	12	56 78					1 2				37 37	5 5	4 4	9 9	6 7	1 1				26 47	4	5	12	1	1	
8JK8	8	8	54 55					1 2	9BR8	9	14	72 55					1 2	10/E/312	25	29	47					1	
8JL8	8	12	40					1	9CG8A	9	14	73					1	10/E/349	6	29	79					1	
			70					2				57					2	10/E/558	6	38	52	7	2	12	10	1	
8JT8	8	12	20 *99					1 2	9CL8	9	14	69 51					1 2	10/E/11448	6	29	93					1	
*Tube good if reads 60 or more.									9DZ8	9	39	27 30	4 4	5 5	8 2	3 1	1	10/E/11533	6	29	63 40	7	2	12	10	1	
8JU8A	8	39	*32	4	5	2	1	1				27 30	4 4	5 5	8 2	3 1	1	10/E/11581	6	38	40					1	
			**32	4	5	8	7	1	9EA8	9	11	71 56					1 2	10EB8	10	12	35 99					1	
*Normally shows short position 8.									9ED4	9	44	*52	4	5	12	8	1	10EG7	10	38	32	8	7	12	1	1	
**Normally shows short position 2.									*Normally shows short position 2-3-6-7-9.			68					1	10EM7	10	38	32	8	7	12	1	1	
8JV8	8	12	55 85					1 2	9GH8A	9	11	68					1	10EW7	10	20	87 92					1	
8K11	8	36	38 38 38	1 1 1	12 12 12	12 12 12	7 9 11	1 1 1	9GV8	9	39	56 25 25		4 4	5 5	12 12	9 2	1 1 1	10FD7	10	39	25 32	4 4	5 5	2 2	3 7	1
8KA8	8	39	26 33	4 4	5 5	12 12	6 2	1 1	9HS6	9	1	66 60					1	10FR7	10	39	24 32	4 4	5 5	2 2	3 7	1	
8KR8	8	12	22 59					1 2	9J6	9	2						1	10GF7	10	44	27	4	5	12	2	1	
8KS8	8	12	33 84					1 2	9JW8	9	11	80 85					1 2				38 68	4	5	12	9	1	
8KT8	8	12	67					1	9KC6	9	39	25 83	4 4	5 5	12 12	2 9	1 1	10GH8	10	11	56 40					6	
			91					2				83	4	5	12	9	1	10GK6	10	9	33	5	4	12	2	1	
8LC8	6	39	24 24	4 4	5 5	3 6	6 2	1 1	9KG6	9	44	*26	4	5	1	8	1	10GM8	10	39	33	5	4	12	7	1	
									*Normally shows short position 2-3-6-7.			22					1	10GN8	10	12	36 98					1	
8LE8	8	39	29	4	5	12	9	1	9KV8	9	12	82					2	10GV8	10	39	25 25	4 4	5 5	12 12	9 2	1	
8LS6	8	9	44					1	9KX6	9	9	16					1				25	4	5	12	2	1	
8LT8	8	39	27 32 32	4 4	5 5	7 1	9 6 8	1 1 1	9KZ8	9	39	26 26	4 4	5 5	12 12	2 9	1 1	10HA6	10	9	23					1	
8MD8	8	44	35 35	4 4	5 5	12 12	6 8	1 1	9LA6	9	9	21					1	10HF8	10	12	27 80					1	
									9M-HH3	9	2	56 56					2	10JA5	10	36	*33	1	12	9	2	1	
			35	4	5	12	9	1				56						*Normally shows short position 3-4-10-11.									
8M-P12	8	1	60					1	9ML8	9	39	34	4	5	12	6	1	10JA8	10	39	25	4	5	12	7	1	
8MU8	8	11	42 60					1 2				4	5	12	8	1					95	4	5	12	3	1	

*Normal Shorts refer to position of "D" Switch.

◆Use TC-80 Adapter

8CX8-10JA8

B & K DYNA-JET MODEL 707 TUBE CHART

Page 11

TUBE TYPE	Heater	Socket	Sensitiv-ity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensitiv-ity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensitiv-ity	A	B	C	D	Test Pos.	
10J18	10	12	20					1	11R3	10	39	33	5	4	2	9	1	1	12B4	12	40	35	5	4	3	/	1
			*99					2	11Y9	12	42	27	5	6	12	1	1	1	12B7	12	37	45	8	1	12	6	1
			*Tube good if it reads 60 or more.									27	5	6	12	8	1	1	12BA6	12	1	78					1
10JY8	10	12	36					1	12A4	12	40	32	5	4	3	7	1	1	12BA7	12	39	33	5	4	12	2	1
			61					2	12A6	12	29	92					1	1	12BA11	12	36	28	1	12	12	4	1
10KR8	10	12	22					1	12A8	12	38	45	7	2	12	5	1	1				36	1	12	12	9	1
			59					2	12AB5	12	16	67					1	1	◆12B-B14	12	44	*33	4	5	1	2	1
10KU8	10	39	22	4	5	12	7	1	12AC6	12	41	42	4	3	12	1	1	1				*Normally shows short position 3-6-7-8.					
			60	4	5	12	2	1	12AC10	12	36	32	1	12	12	7	1	1	12BC32	12	6	91					1
			60	4	5	12	3	1				32	1	12	12	9	1	1				78				2	
10LB8	10	12	21					1				32	1	12	12	11	1	1	12BD6	12	1	85					1
			71					2	12AD6	12	41	35	4	3	12	1	1	1	12BE3	12	36	26	1	12	4	10	1
10LD6	10	9	51					1	12AD7	12	8	85					1	1	12BE6	12	1	91					1
10LD12	10	17	90					1				85					2	1	12BF6	12	6	85					1
			63					2	12AE6	12	41	52	4	3	12	1	1	1				80					2
10LE8	10	39	29	4	5	12	9	1				66	4	3	12	5	1	1	12BF11	12	36	25	1	12	12	3	1
10LW8	10	12	25					1				66	4	3	12	6	1	1				25	1	12	12	8	1
			92					2	12AE7	12	39	32	5	4	9	2	1	1	12BH7	12	8	56					1
10LY8	10	12	21					1				32	5	4	9	7	1	1				56					2
			*99					2	12AE10	12	36	30	1	12	12	8	1	1	12BK5	12	10	53					1
			*Tube good if it reads 28 or more.									31	1	12	12	3	1	1	12BK6	12	6	86					1
10LZ8	10	12	54					1	12AF3	12	15	12					1	1				70					2
			*99					2	12AF6	12	41	37	4	3	12	1	1	1	12BL6	12	41	35	4	3	12	1	1
			*Tube good if it reads 40 or more.						12AF11	12	36	31	1	12	12	11	1	1	12BN6	12	7	75					1
10T10	10	36	28	1	12	12	3	1				31	1	12	12	6	1	1	12BQ6	12	27	69					1
			25	1	12	12	8	1	12AG6	12	41	35	4	3	12	1	1	1	12BR3	12	15	10					1
10Z10	10	36	30	1	12	12	11	1	12AH7	12	38	48	8	7	12	1	1	1	12BR7	12	39	32	5	4	9	2	1
			95	1	12	12	6	1				48	8	7	12	5	1	1				36	5	4	9	6	1
11AF9	10	42	27	5	6	7	1	1	12AJ6	12	41	40	4	3	12	1	1	1				36	5	4	9	7	1
			27	5	6	2	8	1				66	4	3	12	5	1	1	12BS3	12	44	27	4	5	2	7	1
11AR11	12	36	28	1	12	12	5	1				66	4	3	12	6	1	1	12BT3	12	36	27	1	12	4	10	1
			28	1	12	12	10	1	12AJ7	12	39	32	5	4	12	2	1	1	12BT6	12	6	85					1
11BM8	12	39	33	5	4	12	3	1				35	5	4	12	9	1	1				78					2
			39	5	4	12	1	1	12AL5	12	41	33	3	4	12	2	1	1	12BU6	12	6	85					1
11BN11	10	36	29	1	12	12	3	1				33	3	4	12	7	1	1				80					2
			29	1	12	12	7	1	12AL8	12	39	34	5	4	12	3	1	1	12BV7	12	9	39					1
11BQ11	10	36	28	1	12	12	5	1				52	5	4	12	8	1	1	12BV11	12	36	30	1	12	12	6	1
			28	1	12	12	10	1	12AL11	12	36	31	1	12	12	3	1	1				30	1	12	12	7	1
11BT11	10	36	27	1	12	6	11	1				27	1	12	12	8	1	1	12BW4	12	39	50	5	4	12	1	1
			30	1	12	8	5	1	12AQ5	12	3	77					1	1				50	5	4	12	7	1
11C5	12	4	26	1	12	8	3	1	12AS5	12	4	55					1	1	12BX6	12	9	76					1
11CA11	10	36	54					1	12AT6	12	6	85					1	1	12BX7	12	25	55					1
			35	1	12	8	3	1				78					2	1				55					2
			33	1	12	8	6	1	12AT7	12	8	74					1	1	12BY7	12	9	42					1
			33	1	12	7	8	1				74					2	1	12BZ6	12	1	61					1
11CF11	10	36	34	1	12	7	9	1	12AU5	12	28	71					1	1	12BZ7	12	8	95					1
			34	1	12	8	11	1	12AU6	12	1	82					1	1				95					2
11CH11	10	36	32	1	12	8	5	1	12AU7	12	8	75					1	1	12C5	12	4	44					1
			31	1	12	6	11	1				75					2	1	12C8	12	38	55	7	2	12	10	1
			34	1	12	8	5	1	12AU8	12	12	56					1	1				65	7	2	12	4	1
11CY7	12	39	30	1	12	8	3	1				72					2	1				65	7	2	12	5	1
			31	5	4	2	3	1	12AV5	12	28	62					1	1	12C8Y	12	38	55	7	2	12	10	1
			45	5	4	2	7	1	12AV6	12	6	91					1	1				65	7	2	12	4	1
11DS5	10	3	76					1				78					2	1				65	7	2	12	5	1
11FY7	12	36	25	1	12	12	3	1	12AV7	12	8	55					1	1	12CA5	12	4	55					1
			42	1	12	12	10	1				55					2	1	12CK3	12	44	25	4	5	7	2	1
11HM7	10	39	*29	4	5	6	2	1	12AW6	12	1	78					1	1	12CL3	12	44	27	4	5	2	7	1
			*Normally shows short position 3-9.						12AW8	12	12	44					1	1	12CM6	12	16	64					1
11JE8	10	12	56					1				78					2	1	12CN5	12	41	33	4	3	2	5	1
			78					2	12AX3	12	36	30	1	12	10	4	1	1	12CR6	12	41	39	4	3	12	7	1
11KV8	10	12	22					1	12AX4	12	34	13					1	1				61	4	3	12	2	1
			82					2	12AX7	12	8	*85					1	1	12CS6	12	1	94					1
11LQ8	12	12	31					1				*85			</												

*Normal Shorts refer to position of "D" Switch

◆Use TC-80 Adapter

10JT8-12DA6

B & K DYNA-JET MODEL 707 TUBE CHART

Page 12

TUBE TYPE	Heater	Socket	Sensi- tivity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensi- tivity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensi- tivity	A	B	C	D	Test Pos.				
12DB5	12	16	30					1	12EN6	12	29	36					1	12J8	12	39	30	5	4	12	1	1				
12DE8	12	39	36	5	4	12	1	1	12EQ7	12	39	34	5	4	12	2	1				35	5	4	12	8	1				
			34	5	4	12	3	1				71	5	4	12	8	1				35	5	4	12	9	1				
12DF5	12	39	52	5	4	9	1	1	12EZ6	12	41	32	4	3	12	1	1	12JB6	12	35	62									
			52	5	4	9	6	1	12F5	12	38	40	7	2	12	10	1	12JB6A	12	35	62									
12DF7	12	8	*85					1	12F8	12	39	40	5	4	12	8	1	12JF5	12	36	*32	1	12	11	3	1				
			*85					2				62	5	4	12	1	1	*Normally shows short position 4-10												
*Tube good if it reads 22 or more.									12F31	12	1	78					1	12JM6	12	36	26	1	12	4	5	1				
12DJ8	12	39	31	5	4	12	2	1	12FK6	12	41	40	4	3	12	1	1	12JN6	12	36	27	1	12	4	11	1				
			31	5	4	12	7	1				65	4	3	12	5	1	12JN8	12	14	67					1				
12DK6	12	1	61					1				65	4	3	12	5	1				53					2				
12DK7	12	39	33	5	4	8	1	1	12FM6	12	41	35	4	3	12	1	1	12JQ6	12	39	*54	4	5	8	7	1				
			80	5	4	8	6	1				65	4	3	12	1	1				*57	4	5	8	6	1				
			80	5	4	8	9	1				68	4	3	12	5	1	*May show short position 2-3.												
12DL8	12	39	35	5	4	12	3	1				68	4	3	12	6	1	12JS6	12	36	*29	1	12	9	5	1				
			65	5	4	12	9	1	12FQ7	12	8	68					1	*Normally shows short position 3-4-10-11.												
			65	5	4	12	1	1				68					2	12JT6	12	35	65					1				
12DM4	12	34	11					1	12FQ8	12	39	39	5	4	12	2	1	12JT6A	12	35	65					1				
12DN6	12	26	47					1				39	5	4	12	7	1	12JZ8	12	36	29	1	12	6	7	1				
12DQ4	12	34	11					1	12FR8	12	39	*25	4	5	12	3	1				40	1	12	6	10	1				
12DQ6	12	27	65					1				*37	4	5	12	1	1	12JF5	12	36	*32	1	12	11	3	1				
12DQ6B	12	27	62					1	*Normally shows short position 5.									*Normally shows short position 4-10.												
12DQ7	12	9	36					1	12FS5	12	1	99					1	12K5	12	41	35	4	3	5	6	1				
12DS7	12	39	34	5	4	12	3	1	12FT6	12	41	52	4	3	12	1	1	12K7	12	38	52	7	2	12	10	1				
			*85	5	4	12	1	1				66	4	3	12	5	1	12K8	12	38	35	7	2	12	5	1				
			*85	5	4	12	9	1				66	4	3	12	6	1	12KA8	12	39	26	4	5	12	6	1				
*Tube good if it reads 20 or more.									12FV7	12	8	42					1	12KL8	12	39	31	4	5	12	2	1				
12DT5	12	16	45					1				42					2	12L6	12	29	47					1				
12DT6	12	1	91					1	12FX5	12	4	68					1	12MD8	12	44	35	4	5	12	6	1				
12DT7	12	8	*85					1	12FX8	12	39	32	5	4	12	2	1				35	4	5	12	8	1				
			*85					2				28	5	4	12	6	1				35	4	5	12	9	1				
*Tube good if it reads 22 or more.									12FY8	12	39	30	4	5	12	3	1	12MX8	12	44	27	4	5	12	2	1				
12DT8	12	8	71					1				39	4	5	12	1	1				39	4	5	12	9	1				
			71					2	12G4	12	41	41	4	3	1	6	1									1				
12DU7	12	39	31	5	4	12	1	1	12G11	12	36	33	1	12	12	3	1	12Q7	12	38	40	7	2	12	10	1				
			77	5	4	12	7	1				31	1	12	12	8	1				63	7	2	12	4	1				
12DV7	12	39	77	5	4	12	9	1	12GA6	12	41	36	4	3	12	1	1				63	7	2	12	5	1				
			49	5	4	9	7	1	12G-B3A	12	27	65					1	12R5	12	41	39	4	3	2	5	1				
			78	5	4	9	2	1	12G-B7	12	27	61					1	12R-K19	12	15	10					1				
			78	5	4	9	3	1	12GC5	12	16	26					1	12R-LL3	12	8	55					1				
12DV8	12	39	35	5	4	12	3	1	12GC6	12	26	52					1				55					2				
			58	5	4	12	9	1	12GE5	12	36	*24	1	12	11	3	1	12R-LL5	12	8	68					1				
			58	5	4	12	1	1	*Normally shows short position 4-10.									12S8	12	38	45	8	7	5	10	1				
12DW4A	12	44	27	4	5	2	7	1	12GJ5	12	35	65					1				62	8	7	5	1	1				
12DW5	12	16	30					1	12G-K17	12	34	12					1				62	8	7	5	4	1				
12DW7	12	8	75					2	12GN7	12	9	21					1				63	8	7	2	3	1				
			*90					1	12GT5	12	35	63					1	12SA7	12	38	37	7	2	12	5	1				
*Tube good if it reads 22 or more.									12GT5A	12	35	63					1	12SC7	12	38	48	8	7	12	3	1				
12DW8	12	39	32	5	4	12	2	1	12GV5	12	36	*26	1	12	5	9	1				48	8	7	12	4	1				
			32	5	4	12	7	1	*Normally shows short position 3-4-7-10-11.									12SF5	12	38	41	8	7	12	3	1				
			44	5	4	12	9	1	12GW6	12	27	62					1	12SF7	12	38	46	8	7	12	2	1				
12DY8	12	39	30	5	4	12	1	1	12H4	12	40	44	4	3	2	6	1				69	8	7	12	5	1				
			35	5	4	12	9	1	12H6	12	38	48	7	2	12	3	1	12SG7	12	30	77					1				
12DZ6	12	41	33	4	3	12	1	1				48	7	2	12	5	1	12SH7	12	30	77					1				
12DZ8	12	39	27	4	5	8	3	1										12SJ7	12	30	83					1				
			30	4	5	2	1	1	12H31	12	1	91					1	12SK7	12	30	84					1				
12E5	12	25	93					1	12HB25	12	44	*33	4	5	1	2	1	12SL7	12	25	*85					1				
12E13	6	29	52					1	*Normally shows short position 3-6-7-8.												*85					2				
12EA6	12	41	32	4	3	12	1	1	12HE7	12	36	27	1	12	10	2	1	*Tube good if it reads 22 or more.												
12EC8	12	39	30	5	4	12	9	1				27	1	12	10	9	1	12SN7	12	25	78					1				
			32	5	4	12	1	1	12HG7	12	9	28					1				78					2				
12ED5	12	4	57					1	12HL5	12	39	30	4	5	1	2	1	12SQ7	12	38	42	8	7	12	2	1				
12EG6	12	41	36	4	3	12	1	1	12HL7	12	39	*33	4	5	6	2	1				71	8	7	12	4	1				
12EH5	12	4	57					1	*Normally shows short position 3-9.																					
12EK6	12	41	31	4	3	12	1	1	12HU8	12	39	29	4	5	12	2	1	12SR7	12	38	46	8	7	12	2	1				
12EL6	12	41	38	4	3	12	1	1				29	4	5	12	6	1				71	8	7	12	5	1				
			68	4	3	12	5	1	12J5	12	29	93					1	12SS7	12	30	97					1				
			68	4	3	12	6	1	12J7	12	38	50	7	2	12	10	1				68	8	7	12	4	1				
12EM6	12	39	34	5	4	12	1	1																						

*Normal Shorts refer to position of "D" Switch.

◆Use TC-80 Adapter

12DB5-12SS7

TUBE TYPE	Heater	Socket	Sensitiv-ity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensitiv-ity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensitiv-ity	A	B	C	D	Test Pos.
12SW7	12	38	52 70 70	8 8 8	7 7 7	12 12 12	2 4 5	1 1 1	14BR11	14	36	30 31 33	1 1 1	12 12 12	2 8 10	1 1 1	15KY8	15	44	27 39 27	4 4 4	5 5 5	12 12 12	2 9 2	1 1 1	
12SX7	12	25	78 78					1 2	14C5	12	37	38	8	1	12	6	1	15KY8A	15	44	39	4	5	12	9	1
12SY7	12	38	39	/	2	12	5	1	14C7	12	37	37	8	1	12	6	1	15LE8	15	39	29	4	5	12	9	1
12T10	12	36	28 25	1 1	12 12	12 12	3 8	1 1	14E6	12	37	40 69 69	8 8 8	1 1 1	4 4 6	3 5 6	1 1 1	15MF8	15	36	35 34	1 1	12 12	6 6	7 10	1 1
12U7	12	39	40 40	5 5	4 4	9 9	2 7	1 1	14E7	12	37	47 68	8 8	1 1	12 3	6 1	1 1	15MX8	15	44	27 39	4 4	5 5	12 12	2 9	1 1
12V6	12	29	79					1				68	8	1	12	4	1	16A5	16	23	68					1
12W6	12	29	51					1	14F7	12	37	45	8	1	12	4	1	16A8	16	39	33 39	5 5	4 4	12 12	3 1	1 1
12X4	12	41	44 44	4 4	3 3	12 12	1 6	1 1	14F8	12	37	45 30 30	8 7 7	1 2 2	12 12 12	5 1 8	1 1 1	16AK9	7	36	33 35 31	6 6 6	12 12 6	6 6 8	10 3 1	1 1 1
13CM5	12	27	57					1				30	7	2	12	8	1	16AQ3*	16	40	30	5	4	7	3	1
13CW4	14	43	*87	10	12	12	2	1	14GT8	14	39	52 35	5 5	4 4	12 12	8 2	1 1	*If no test, use alternate settings.								
*For grid emission turn D switch to position 4.												35	5	4	12	6	1	16AQ3	16	40	30	5	4	3	7	1
13D1	25	25	78 78					1 2	14GW8	14	39	25 35	4 4	5 5	2 7	8 1	1 1	16BQ11	16	36	28 28	1 1	12 12	5 10	5 1	1
13DE7	12	20	81					1				35	4	5	7	1	1	16BX11	16	36	32 31 31	1 1 1	12 12 12	2 5 8	2 1 1	1
13DF7	12	8	90 *85 *85					2 1 2	14H7	12	37	35	8	1	12	6	1	16C-B28	16	36	*28	1	12	5	9	1
*Tube good if it reads 22 or more.									14J7	12	37	35 50	8 8	1 1	12 12	6 4	1 1	*Normally shows short position 3-4-10-11.								
13DR7	12	39	32	5	4	2	3	1	14JG8	14	39	32 27	4 4	5 5	12 12	8 6	1 1	16CL8	16	14	69 51					1 2
13EM7	12	38	41 32 45	5 8 8	4 7 7	7 12 12	1 4 1	1 1 1	14N7	12	37	27 42 42	4 8 8	5 1 1	12 12 12	6 4 5	1 1 1	16GK6	16	9	40					1
13FD7	12	39	25 32	4 4	5 5	2 2	7 7	1 1	14Q7	12	37	35	8	1	12	4	1	16GY5	16	36	*25	1	12	5	9	1
13FG7	12	14	68 56					1 2	14R7	12	37	35	8	1	12	6	1	*Normally shows short position 1-3-4-7-10.								
13FM7	14	36	25 36	1 1	12 12	3 3	8 10	1 1				72	8	1	12	3	1	16HB5	16	36	*25	1	12	11	3	1
13FR7	12	39	24	4	5	2	3	1	14S7	12	37	72 38 52	8 8 8	1 1 1	12 12 12	4 6 4	1 1 1	*Normally shows short position 4-10.								
			32	4	5	2	7	1	14V7	12	37	32	8	1	12	6	1	16K11	16	36	38 38 38	1 1 1	12 12 12	7 9 11	1 1 1	
13GB5	12	44	*25	4	5	2	1	1	14W7	12	37	31	8	1	4	6	1	16KA6	16	36	*30	1	12	9	5	1
*Normally shows short position 3-6-7-8.									14X7	12	37	43 36	8 8	1 1	12 12	3 5	1 1	*May show short position 3-4-7-11.								
13GF7	12	44	27 38	4 4	5 5	12 12	2 9	1 1				36	8	1	12	5	1	16LD6	16	9	51					1
			38	4	5	12	9	1	14Y4	12	37	35 45	8 8	1 1	12 3	6 1	1	16LU8	16	36	27 27	1 1	12 12	6 6	7 10	1 1
13GF7A	12	44	27 38	4 4	5 5	12 12	2 9	1 1				45	8	1	12	6	1	16MY8	16	36	27 27	1 1	12 12	6 6	7 10	1 1
13J10	12	36	96	1	12	12	6	1	15A6	15	39	30	5	4	12	2	1	16Y9	16	42	27 27	5 5	6 6	12 12	1 8	1
13J10	12	36	28	1	12	12	11	1	15A8	15	38	36 40	7 7	2 2	12 12	4 3	1 1	17A8	17	11	66					1
13J18	12	12	20					1	15AB9	15	42	79	5	6	10	2	1									
			*99					2				79	5	6	4	8	1									
*Tube good if it reads 60 or more.									15AF11	15	36	31 31 35	1 1 1	12 12 12	11 6 3	1 1 1	17AB9	17	42	79 79 29	5 5 1	6 6 12	10 4 12	2 8 11	1 1 1	
13JZ8	12	36	29 40	1 1	12 12	6 6	7 10	1 1	15BD11	15	36	26	1	12	12	11	1	17AB10	17	36	95	1	12	12	6	1
13SJ7	12	30	83					1				31 31	1 1	12 12	12 6	3 1	17AF3	17	15	12 62					1 1	
13V10	12	36	33 33	1 1	12 12	12 12	3 8	1 1	15BD11A	15	36	26 31 31	1 1 1	12 12 12	11 3 6	1 1 1	17AV5	17	28	30	1	12	10	4	1	
13Z10	12	36	30 95	1 1	12 12	12 12	11 6	1 1				31	1	12	12	3	1	17AX3	17	36	13					1
14A4	12	37	41	8	1	12	6	1				31	1	12	12	6	1	17AX4	17	34	27	5	4	7	2	1
14A5	12	37	34	8	1	12	6	1				45	8	1	12	6	1	17AY3	17	44	27	5	4	7	2	1
14A7	12	37	45	8	1	12	6	1	15CW5	15	23	58					1	17AY3B	17	44	27	5	4	7	2	1
14AF7	12	37	41 41	8 8	1 1	12 12	4 5	1 1	15DQ8	15	39	26	4	5	12	8	1	◆17B-B14	17	44	*33	4	5	1	2	1
14B6	12	37	40	8	1	4	3	1	15EA7	15	38	26 35 39	4 8 8	5 7 7	12 12 12	1 1 4	1 1 1	*Normally shows short position 3-6-7-8.								
			68	8	1	4	5	1				77					17BD11	17	36	26 31	1 1	12 12	11 3	1 1	1	
14B8	12	37	68	8	1	4	6	1	15EW6	15	1	77					1									
14BF11	14	36	42 25 25	8 1 1	12 12 12	4 3 3	1 1 1	1 1 1	15EW7	15	20	87 92					2	17BE3	17	36	26 25	1 1	12 12	4 3	10 1	1 1
			29	1	12	12	8	1	15FM7	15	36	25 36	1 1	12 3	3 10	8 1	1	17BF11	17	36	25 25	1 1	12 12	3 8	1 1	1
14BL11	14	36	29 31	1 1	12 12	12 12	3 5	1 1	15FY7	15	36	25 42	1 1	12 12	12 10	3 1	1	17BF11A	17	36	25	1	12	12	3	1
14BQ11	14	36	28 28	1 1	12 12	12 12	5 10	1 1	15HA6	15	9	23					1	17BH3	17	44	27	5	4	7	2	1
									15HB6	15	9	20					1	17BH3A	17	44	27	5	4	7	2	1
																	1	17BJ6	17	1	81					1
																	1	17BQ6	17	27	69					1

*Normal Shorts refer to position of "D" Switch. ◆Use TC-80 Adapter.

12SW7-17BQ6

B & K DYNA-JET MODEL 707 TUBE CHART

Page 14

TUBE TYPE	Heater	Socket	Sensi- tivity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensi- tivity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensi- tivity	A	B	C	D	Test Pos.	
17BR3	17	15	10					1	17R5	17	4	50					1	19GY5	19	36	*25	1	12	5	9	1	
17BS3	17	44	27	4	5	2	7	1	17R-HH2	17	8	65					1	*Normally shows short position 3-4-7-10-11.									
17BW3	17	36	28	1	12	4	10	1				65					2	19HR6	19	1	71					1	
17BZ3	17	36	30	1	12	4	10	1	17R-K19	17	15	10					1	19HS6	19	1	66					1	
17C5	17	4	44					1	17W6	17	29	52					1	19HV8	19	14	64					1	
17C8	17	39	33	5	4	12	2	1	17X10	17	36	98	1	12	12	6	1		*99							2	
			65	5	4	12	7	1				28	1	12	12	11	1	*Tube good if it reads 40 or more.									
			65	5	4	12	8	1	17Y9	17	42	27	5	6	12	1	1	19J6	19	2	60					1	
17C9	17	39	28	5	4	6	1	1				27	5	6	12	8	1				60					2	
			28	5	4	10	7	1	17Z3*	17	39	33	4	5	2	9	1	19JC6	19	9	65					1	
17CA5	17	4	55					1	*If No Test use alternate settings below.									19JN8	19	14	67					1	
17CK3	17	44	25	4	5	7	2	1				17	40	33	4	5	2	3	1	19JN8	19	14	53				2
17CL3	17	44	27	4	5	2	7	1	18A5	18	28	69					1	◆19KF6	19	44	33	4	5	7	1	1	
17CQ4	17	34	11					1	18AJ10	18	36	32	1	12	4	3	1	19KG8	19	39	21	4	5	12	9	1	
17CT3	17	39	32	4	5	6	2	1				33	1	12	4	8	1				21	4	5	12	2	1	
17CU5	17	4	47					1	18AK5	18	1	63					1	19MR9	19	1	73					1	
17D4	17	34	11					1	18AQ5	18	3	77					1	19Q9	19	39	25	4	5	12	1	1	
17DE4	17	34	13					1	18C51	18	39	29	9	1	12	3	1				25	4	5	12	8	1	
17DM4	17	34	11					1				29	9	1	12	7	1	19T8	19	17	90					1	
17DQ4	17	34	11					1	18DZ8	18	39	27	4	5	8	3	1				63					2	
17DQ6	17	27	65					1				30	4	5	2	1	1	19U3	19	39	29	5	4	12	9	1	
17DQ6B	17	27	62					1	18FW6	18	1	79					1	19V8	19	39	40	5	4	12	6	1	
17DW4A	17	44	27	4	5	2	7	1	18FX6	18	1	92					1				32	5	4	12	2	1	
17EW8	17	8	65					1	18FY6	18	6	84					1				32	5	4	12	7	1	
			65					2				81					2				61	5	4	12	9	1	
17FY7	17	36	25	1	12	12	3	1	18GB5◆	18	44	*25	4	5	2	1	1	19W3	19	39	29	5	4	12	9	1	
			42	1	12	12	10	1	*Normally shows short position 3-6-7-8.									19X3	19	39	29	5	4	12	9	1	
17GE5	17	36	*24	1	12	11	3	1	18GD6	18	1	80					1	19X8	19	12	73					1	
*Normally shows short position 4-10.									18GE6	18	6	78					1				61					2	
17GJ5	17	35	65					1				85					2	19Y3	19	39	29	4	5	12	9	1	
17GJ5A	17	35	65					1	18GV5	18	36	*26	1	12	5	9	1	20AQ3*	19	40	30	5	4	7	3	1	
17GT5	17	35	63					1	*Normally shows short position 3-4-7-10-11.									*If no test, use alternate settings.									
17GT5A	17	35	63					1	18GV8	18	39	25	4	5	12	9	1	20AQ3	19	40	30	5	4	3	7	1	
17GV5	17	36	*26	1	12	9	5	1				25	4	5	12	2	1	20D1	9	41	33	3	4	12	2	1	
*Normally shows short position 3-4-7-10-11.									18HB8	18	39	36	5	4	12	9	1				33	3	4	12	7	1	
17GW6	17	27	62					1				33	5	4	12	1	1	20EQ7	19	39	34	5	4	12	2	1	
17GY5	17	36	*25	1	12	5	9	1	18J6	18	6	60					1				71	5	4	12	8	1	
*Normally shows short position 3-4-7-10-11.												60					2	20EW7	19	20	87					1	
17H3	17	15	13					1	18R-AL1	18	39	33	4	5	2	3	1				92					2	
◆17H-B25	17	44	*33	4	5	1	2	1	19A3	19	41	32	3	4	6	5	1	20E27	19	39	35	2	1	3	5	1	
*Normally shows short position 3-6-7-8.									19AJ8	6	39	85	5	4	12	1	1				35	2	1	3	8	1	
17HC8	17	39	36	5	4	12	3	1				38	5	4	12	9	1	20LF6	20	36	*31	1	12	5	9	1	
			38	5	4	12	1	1	19AQ5	19	3	77					1	*May show short position 3-4-7-10-11.									
17HG8	17	39	25	4	5	3	2	1	19AU4	19	34	10					1	21A6	22	39	*32	5	4	7	2	1	
			25	4	5	1	6	1	19BG6	19	26	66					1	*Normally shows short position 1-6-9.									
17JB6	17	35	62					1	19BX6	19	9	76					1	21AK6	22	1	82					1	
17JB6A	17	35	62					1	19BY7	19	9	62					1	21EX6	22	26	42					1	
17JF6	17	44	*26	4	5	2	6	1	19C8	19	17	94					1	21GY5	22	36	*25	1	12	5	9	1	
*Normally shows short position 1-7.												62					2	*Normally shows short position 3-4-7-10-11.									
17JG6	17	35	56					1	19CG3	19	36	30	1	12	4	10	1	21HB5	22	36	*25	1	12	11	3	1	
17JG6A	17	35	56					1	19CL8-A	19	14	74					1	*Normally shows short position 4-10.									
17JK8	17	8	54					1				53					2	21HD5	22	36	*27	1	12	3	11	1	
			55					2	19D8	19	39	32	5	4	12	2	1	*Normally shows short position 4-5-9-10.									
17JM6	17	36	26	1	12	4	5	1				35	5	4	12	9	1	21HJ5	22	36	*27	1	12	3	11	1	
17JN6	17	36	27	1	12	4	11	1	19DE7	19	20	81					1	*Normally shows short position 4-5-9-10.									
17JQ6	17	39	*34	4	5	8	7	1				90					2	21JS6	22	36	*29	1	12	9	5	1	
			*57	4	5	8	6	1	19DK3	19	44	31	4	5	2	7	1	*Normally shows short position 3-4-10-11.									
*May show short position 2-3.									19DN6	19	26	47					1	21JV6	22	36	28	1	12	4	11	1	
17JR6	17	35	50					1	19DQ3	19	36	30	1	12	4	10	1	21JZ6	22	36	*29	1	12	9	5	1	
17JS6	17	36	*29	1	12	9	5	1	19EAB	19	11	71					1	*Some tubes may show short position 3-4-10-11.									
*Normally shows short position 3-4-10-11.												56					2	21KA6	22	36	*30	1	12	9	5	1	
17JT6	17	35	65					1	19EW7	19	20	87					1	*May show short position 3-4-7-11.									
17JT6A	17	35	65					1				92					2	21KQ6◆	22	44	*29	4	5	1	8	1	
17JZ8	17	36	29	1	12	6	7	1	19EZ8	19	39	33	5	4	12	2	1	*Normally shows short position 2-3-6-7.									
			40	1	12	6	10	1				33	5	4	12	7	1	21LG6	22	36	*32	1	12	9	5	1	
17KV6	17	44	30	4	5	1	2	1				33	5	4	12	9	1	*May show short position 2-3-4-7-10-11.									
17KW6◆	17	44	30	4	5	1	8	1	19FX5	19	4	68					1	21LR8	22	44	31	4	5	12	2	1	
17L6	17	29	47					1	19GQ7	19	39	24	4	5	3	2	1				31	4	5	12	9	1	
17LD8	17	44	25	4	5	12	2	1				24	4	5	3	6	1	21LU8	22	36	27	1	12	6	7	1	
			33	4	5	12	9	1				24	4	5	3	8	1				27	1	12	6	10	1	

B & K DYNA-JET MODEL 707 TUBE CHART

Page 15

TUBE TYPE	Heater	Socket	Sensitiv-ity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensitiv-ity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensitiv-ity	A	B	C	D	Test Pos.		
21MY8	22	36	27	1	12	6	7	1	25HX5	25	44	*30	4	5	7	1	1	30KD6	30	36	*26	1	12	9	5	1		
22AL3*	22	40	30	5	4	7	3	1	*Normally shows short position 2-3.									*Normally shows short position 3-4-10-11.										
*If no test, use alternate settings.									25JQ6	25	39	*34	4	5	8	7	1	30KG6	30	44	*26	4	5	1	8	1		
22AL3	22	40	30	5	4	3	7	1	25JZ8	25	36	*57	4	5	8	6	1	*Normally shows short position 2-3-6-7.										
22BH3	22	44	27	5	4	7	2	1				40	1	12	6	10	1	30L1	7	39	33	5	4	7	2	1		
22BH3A	22	44	27	5	4	7	2	1	25L6	25	29	47						30MB6	30	36	*32	1	12	9	5	1		
22BW3	22	36	28	1	12	4	10	1	25M-P20	25	1	43						*Normally shows short position 3-4-10-11.										
22DE4	22	34	13					1	25R-K19	25	15	10						30M-P23	30	41	30	3	4	5	2	1		
22JF6	22	44	*26	4	5	2	6	1	25SN7	25	25	78						30M-P27	30	41	30	3	4	5	2	1		
*Normally shows short position 1-7.												78						30PL12	16	39	33	5	4	12	3	1		
22JG6	22	35	56					1	25U4	25	34	11								39	5	4	12	1	1			
22JG6A	22	35	56					1	25W4	25	34	11						30P16	16	23	68					1		
22JR6	22	35	50					1	25W6	25	29	51						31AL10	30	36	51	1	12	6	3	1		
22JU6	2	35	55					1	25Z6	25	38	34	7	2	12	3	1			33	1	12	6	8	1			
22KM6	22	35	53					1				34	7	2	12	5	1				38	1	12	6	11	1		
22KV6	22	44	30	4	5	1	2	1	26A6	25	1	77						31JS6A	30	36	*29	1	12	9	5	1		
23JS6	22	36	*29	1	12	9	5	1	26A7	25	38	29	7	6	12	1	1	*Normally shows short position 3-4-10-11.										
*Normally shows short position 3-4-10-11.												29	7	6	12	3	1	31LQ6	30	35	52					1		
23JS6A	22	36	*29	1	12	9	5	1	26AQ8	25	8	70						31LR8	30	44	31	4	5	12	2	1		
*Normally shows short position 3-4-10-11.												70								31	4	5	12	9	1			
23MB6	22	36	*32	1	12	9	5	1	26BK6	25	6	86						31LZ6	30	35	53					1		
*Normally shows short position 3-4-10-11.												70						32A8	30	39	33	5	4	12	3	1		
23Z9	22	36	30	1	12	6	10	1	26C6	25	6	85								39	5	4	12	1	1			
			39	1	12	6	3	1				82						32ET5	30	4	60					1		
			28	1	12	6	8	1	26D6	25	1	93						32HQ7	35	36	34	1	12	7	2	1		
24AX4	25	34	13					1	26DQ5	25	26	55								34	1	12	7	9	1			
24BF11	25	36	25	1	12	12	3	1	26E6	25	29	40						33GT7	30	36	*55	1	12	7	10	1		
			25	1	12	12	8	1	26HU5	25	38	*28	7	8	1	5	1	*26 1 12 7 2 1										
24JE6A	25	35	59					1	*Normally shows short position 2-6.									*Normally shows short position 9-11.										
24JZ8	25	36	29	1	12	6	7	1	26JG6	25	35	56						33GY7	30	36	*56	1	12	7	11	1		
			40	1	12	6	10	1	26LW6	25	38	*31	7	8	1	5	1			*26	1	12	7	2	1			
24LQ6	25	35	52					1	*Normally shows short position 2-6.									*Normally shows short position 9-10.										
24LZ6	24	35	53					1	26Z5	25	39	36	5	4	9	1	1	33GY7A	30	36	*56	1	12	7	11	1		
25A6	25	29	74					1				36	5	4	9	6	1			*26	1	12	7	2	1			
25AU4	25	34	10					1	27GB5	25	44	*25	4	5	2	1	1	*Normally shows short position 9-10.										
25AV5	25	28	62					1	*Normally shows short position 3-6-7-8.									33HE7	30	36	27	1	12	10	2	1		
25AX4	25	34	13					1	27KG6	25	44	*26	4	5	1	8	1			27	1	12	10	9	1			
25B6	25	29	48					1	*Normally shows short position 2-3-6-7.									33JR6	30	35	55					1		
25B-B14	25	44	*33	4	5	1	2	1	27LF6	25	36	*31	1	12	5	9	1	33JV6	30	36	28	1	12	4	11	1		
*Normally shows short position 3-6-7-8.												30	37	40	8	1	12	2	1	34CD3	35	36	*27	1	12	4	10	1
25BK5	25	10	53					1	28D7			40	8	1	12	2	1	*Some tubes may show short position 5-6-8-9.										
25BQ6	25	27	69					1				40	8	1	12	7	1	34CE3	35	36	25	1	12	4	10	1		
25BR3	25	15	10					1	28EC4	30	38	32	7	8	2	5	1	34CM3	35	44	30	4	5	2	7	1		
25C5	25	4	44					1	28GB5	30	44	*25	4	5	2	1	1	34DK3	35	44	31	4	5	2	7	1		
25C6	25	29	45					1	*Normally shows short position 3-6-7-8.									34GD5	35	4	57					1		
25CA5	25	4	55					1	28HA6	30	9	23						34R3	35	39	33	5	4	2	9	1		
25CD6	25	26	53					1	28HD5	30	36	*27	1	12	3	11	1	35A5	35	37	34	8	1	12	6	1		
25CG3	25	36	30	1	12	4	10	1	*Normally shows short position 4-5-9-10.									35B5	35	3	55					1		
25CK3	25	44	30	4	5	7	2	1	29GK6	30	9	40						35C5	35	4	54					1		
25CM3	25	44	30	4	5	2	7	1	29KQ6	30	44	*29	4	5	1	8	1	35CD6	35	26	53					1		
25CT3	25	39	32	4	5	6	2	1	*Normally shows short position 2-3-6-7.									35DZ8	35	39	27	4	5	8	3	1		
25CU6	25	27	69					1	29LE6	30	44	*30	4	5	8	1	1			30	4	5	2	1	1			
25D4	25	34	11					1	*Normally shows short position 2-3-6-7.											30	4	5	2	1	1			
25DK3	25	44	31	4	5	2	7	1	30A5	30	41	27	3	4	5	2	1	35EH5	35	4	57					1		
25DK4	25	41	26	3	4	6	5	1	30AE3*	30	40	30	5	4	7	3	1	35GL6	35	41	39	4	3	6	2	1		
25DL3	25	44	29	4	5	7	2	1	*If no test, use alternate settings.									35HB8	35	39	36	5	4	12	9	1		
25DN6	25	26	47					1	30AE3	30	40	30	5	4	3	7	1			33	5	4	12	1	1			
25DQ6	25	27	65					1	30AG11	30	36	28	1	12	12	8	1	35L6	35	29	54					1		
25DT5	25	16	45					1				28	1	12	12	5	1	35LR6	35	36	*32	1	12	9	5	1		
25E5	25	27	58					1				33	1	12	12	10	1	*May show short position 3-4-7-10-11.										
25EC6	25	26	53					1				33	1	12	12	3	1	35W4	35	41	33	4	3	6	5	1		
25EH5	25	4	57					1	30C1	9	11	66						35Y4	35	37	31	8	1	4	2	1		
25F5	25	4	54					1	30CW5	30	23	58						35Z3	35	37	31	8	1	12	2	1		
25F5A	25	4	54					1	30HD5	30	36	*27	1	12	3	11	1	35Z4	35	38	33	7	2	12	5	1		
25FY8	25	39	30	4	5	12	3	1	*Normally shows short position 4-5-9-10.									35Z5	35	38	33	7	2	3	5	1		
			39	4	5	12	1	1	30HJ5	30	36	*27	1	12	3	11	1	36AM3	35	41	35	4	3	6	5	1		
25G-B6	25	27	64					1	*Normally shows short position 4-5-9-10.									36AM3-B	35	41	35	4	3	6	5	1		
25GE5	25	36	*24	1	12	11	3	1	30JZ6	30	36	*31	1	12	9	5	1	36KD6	35	36	*26	1	12	9	5	1		
*Normally shows short position 4-10.												28	1	12	12	5	1	*Normally shows short position 3-4-10-11.										
												33	1	12	12	10	1	36MC6	35	35	46							
									30C1	9	11	66																
									30CW5	30	23	58																
									30HD5	30	36	*27	1	12	3	11	1											
									*Normally shows short position 4-5-9-10.																			
									30HJ5	30	36	*27	1	12	3	11	1											
									*Normally shows short position 4-5-9-10.																			
									30JZ6	30	36	*31	1															

B & K DYNA-JET MODEL 707 TUBE CHART

TUBE TYPE	Heater	Socket	Sensitiv-ity	A	B	C	D	Test Pos.
38A3	35	40	30	4	5	1	6	1
38HE7	40	36	27	1	12	10	2	1
			27	1	12	10	9	1
38HK7	40	36	29	1	12	10	9	1
			29	1	12	10	2	1
40FR5	40	4	54					1
40KD6	40	36	*26	1	12	9	5	1
*Normally shows short position 3-4-10-11.								
40KG5	40	44	*26	4	5	1	8	1
*Normally shows short position 2-3-6-8.								
40Z5	50	38	31	7	2	3	5	1
42EC4	40	38	32	7	8	2	5	1
42KN6	22	36	*30	7	12	9	5	1
*DO NOT turn D switch to position 1 and 12.								
*Normally shows short position 3-4-10-11.								
45B5	50	23	68					1
45Z3	50	41	32	7	1	6	2	1
45Z5	50	38	31	7	2	3	5	1
50A5	50	37	35	8	1	12	6	1
50B5	50	3	38					1
50BK5	50	10	53					1
50BM8	50	39	33	5	4	12	3	1
			39	5	4	12	1	1
50C5	50	4	44					1
50C6	50	29	45					1
50CA5	50	4	55					1
50CD6	50	26	53					1
50DC4	50	41	33	4	3	6	5	1
50E5	50	27	58					1
50EH5	50	4	57					1
50FA5	50	4	54					1
50FE5	50	29	37					1
50FK5	50	4	88					1
50FY8	50	39	30	4	5	12	3	1
			39	4	5	12	1	1
50GY7	50	36	*55	1	12	7	11	1
			*30	1	12	7	2	1
*Normally shows short position 9-10.								
50HC6	50	41	26	3	4	6	2	1
50HK6	50	41	27	3	4	6	2	1
50HN5	50	39	30	4	5	1	2	1
50JY6	50	27	55					1
50L6	50	29	47					1
50X6	50	37	35	8	1	12	3	1
			35	8	1	12	6	1
50Y6	50	38	35	7	2	12	3	1
			35	7	2	12	5	1
50Y7	50	38	35	7	2	6	3	1
			35	7	2	6	5	1
53HK7	50	36	29	1	12	10	9	1
			29	1	12	10	2	1
53KU	5	33	10					1
			10					2
55N3	50	39	29	4	5	6	9	1
58HE7	50	36	27	1	12	10	2	1
			27	1	12	10	9	1
60EH5	50	4	57					1
60FX5	50	4	68					1
60HL5	50	39	30	4	5	1	2	1
64SPT	6	39	33	5	4	1	2	1
150C3	50	38	*99	2	11	3	5	1
*Tube good if it reads 60 or more.								
*Normally shows short position 11.								
*Normally shows grid emission.								
213PEN	19	39	*32	5	4	7	2	1
*Normally shows short position 1-6-9.								
396-A	6	39	29	9	1	12	3	1
			29	9	1	12	1	1
403B	6	1	63					1

TUBE TYPE	Heater	Socket	Sensitiv-ity	A	B	C	D	Test Pos.
407A	40	39	29	1	9	5	3	1
			29	1	9	5	7	1
408A	19	1	65					1
502A	6	38	26	2	7	12	5	1
884	6	38	35	2	7	12	5	1
1003	6	31	8					1
			8					2
1201	6	37	*33	8	2	1	5	1
*Normally shows short position 3-4-6-7.								
1203	6	37	53	8	1	12	4	1
1222A	6	38	25	1	6	12	4	1
1223	6	38	50	7	2	12	10	1
1232	6	37	36	8	1	12	6	1
1273	6	37	37	8	1	12	6	1
1274	6	37	45	8	1	12	3	1
			45	8	1	12	6	1
1280	12	37	37	8	1	12	6	1
1294	2	37	60	8	1	12	4	1
1611	6	29	91					1
1612	6	38	44	7	2	1	10	1
1614	6	29	67					1
1619	3	38	39	7	2	12	5	1
1620	6	38	50	7	2	12	10	1
1621	6	29	91					1
1622	6	29	63					1
1626	12	29	82					1
1631	6	29	63					1
1632	12	29	47					1
1634	12	38	48	8	7	12	3	1
			48	8	7	12	4	1
1665	6	41	32	4	3	5	1	1
1667	6	41	32	4	3	5	1	1
1852	6	30	60					1
1853	6	30	74					1
2050	6	38	34	7	2	12	5	1
5591	6	1	63					1
5649	12	29	92					1
5654	6	1	63					1
5659	12	29	92					1
5661	12	30	84					1
5663	6	41	25	3	4	12	1	1
5670	6	39	29	9	1	12	3	1
			29	9	1	12	7	1
5679	6	37	48	8	1	12	3	1
			48	8	1	12	6	1
5686	6	23	87					1
5687	12	39	37	5	4	8	2	1
			37	5	4	8	7	1
5691	6	25	*85					1
			*85					2
*Tube good if it reads 22 or more.								
5692	6	25	78					1
			78					2
5693	6	30	83					1
5696	6	41	34	4	3	5	6	1
5725	6	1	77					1
5726	6	41	33	3	4	12	2	1
			33	3	4	12	7	1
5727	6	41	32	4	3	5	1	1
5749	6	1	78					1
5750	6	1	91					1
5751	12	8	*85					1
			*85					2
*Tube good if it reads 22 or more.								
5755	16	39	38	4	5	9	3	1
			38	4	5	9	6	1
5763	6	39	33	5	4	8	9	1
5814-A	12	8	75					1
			75					2

TUBE TYPE	Heater	Socket	Sensitiv-ity	A	B	C	D	Test Pos.
5823			1 41	*85	5	6	5	4 1
*Ignore short lamp indication.								
*Normally shows grid emission.								
5824			25 29	48				1
5845			4 41	*100	3	4	7	1 1
*100 3 4 7 5 1								
*Tube good if it reads 10 or more								
5871			6 29	79				1
5879			6 39	52	5	4	12	1
5881			6 29	63				1
5915			6 1	92				1
5920			6 2	49				1
				49				2
5931			5 33	16				1
				16				2
5932			6 29	63				1
5961			6 38	37	7	2	12	5 1
5963			12 8	76				1
				76				1
5964			6 2	67				2
				67				2
5965			12 8	54				1
				54				2
5992			6 29	79				1
6005			6 3	77				1
6006			6 30	77				1
6012			6 38	28	2	7	12	3 1
6028			19 1	63				1
6042			6 25	78				1
				78				2
6046			25 29	47				1
6057			12 8	*85				1
				*85				2
*Tube good if it reads 22 or more.								
6058			6 41	33	3	4	12	2 1
				33	3	4	12	7 1
6060			12 8	74				1
				74				2
6062			6 39	33	5	4	8	9 1
6066			6 6	85				1
				78				2
6067			12 8	75				1
				75				2
6069			6 1	63				1
6072			12 8	93				1
				93				2
6080			6 38	35	8	7	12	1 1
				35	8	7	12	4 1
6082			25 38	35	8	7	12	1 1
				35	8	7	12	4 1
6084			6 39	39	4	5	7	9 1
6085			12 8	74				1
				74				2
6087			5 33	23				1
				23				2
6096			6 1	63				1
6097			6 41	33	3	4	12	2 1
				33	3	4	12	7 1
6100			6 41	41	4	3	1	6 1
6101			6 2	60				1
				60				2
6113			6 25	*85				1
				*85				2
*Tube good if it reads 22 or more.								
6134			6 30	60				1
6135			6 41	41	4	3	1	6 1
6136			6 1	82				1
6137			6 30	84				1
6146			6 38	*38	7	2	1	5 1
*Normally shows short position 4-6.								

◆Use TC-80 Adapter

*Normal Shorts refer to position of "D" Switch.

- Use TC-62B Adapter.

38A3-6146

B & K DYNA-JET MODEL 707 TUBE CHART

TUBE TYPE	Heater	Socket	Sensitivity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensitivity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensitivity	A	B	C	D	Test Pos.
6147	6	29	63					1	6829	12	8	54					1	7586	6	43	*65	10	12	12	2	1
6159	25	38	*38	7	2	1	5	1				54					2									
*Normally shows short position 4-6.									6883	12	38	*38	7	2	1	5	1									
6180	6	25	78					1	*Normally shows short position 4-6.																	
			78					2	6887	6	41	33	4	3	12	2	1									
6186	6	1	80					1				33	4	3	12	7	1									
6187	6	1	87					1	6888	6	30	62					1									
6188	6	25	*81					1	6919	6	41	33	3	4	12	2	1									
			*81					2				33	3	4	12	7	1									
*Tube good if it reads 22 or more.									6922	6	8	24					1									
6189	12	8	75					1				24					2									
			75					2	6939	12	39	34	4	5	9	1	1									
6197	6	39	*32	5	4	2	9	1				34	4	5	9	3	1									
*Normally shows short position 3-8.									6968	6	1	63					1									
6198	12	8	75					1	6973	6	16	62					1									
			75					2	7000	6	38	50	7	2	12	10	1									
6201	12	8	74					1	7025	12	8	*85					2									
			74					2				*85														
6202	6	41	44	4	3	12	1	1	*Tube good if it reads 22 or more.																	
			44	4	3	12	6	1	7027	6	38	*36	7	2	5	6	1									
6203	6	39	41	4	5	12	1	1	*Normally shows short position 1-4.																	
			41	4	5	12	9	1	7036	6	1	92					1									
6211	12	8	54					1	7044	12	39	30	4	5	8	2	1									
			54					2				30	4	5	8	7	1									
6216	6	39	*29	4	5	3	2	1	7054	12	9	42					1									
*Normally shows short position 1-6.									7055	12	41	33	3	4	12	2	1									
6218	6	39	72	4	5	12	2	1				33	3	4	12	7	1									
6227	6	9	53					1	7056	12	1	64					1									
6265	6	1	89					1	7057	12	8	53					1									
6267	6	39	40	5	4	2	9	1				53					2									
6293	6	38	*38	7	2	1	5	1	7058	12	8	*85					1									
*Normally shows short position 4-6												*85					2									
6336	6	38	29	8	7	12	1	1	*Tube good if it reads 22 or more.																	
			29	8	7	12	4	1	7059	12	11	79					1									
6350	12	39	31	4	5	9	3	1				55					2									
			31	4	5	9	8	1																		
6360	12	39	30	4	5	9	1	1	7060	12	13	55					1									
			30	4	5	9	3	1				75					2									
6384	6	38	33	8	6	12	7	1	7061	12	16	67					1									
6417	12	39	33	5	4	8	9	1	7062	12	8	54					1									
			33	5	4	8	9	1				54					2									
6463	12	39	28	4	5	9	3	1	7105	12	38	35	8	7	12	1	1									
			28	4	5	9	8	1				35	8	7	12	4	1									
6485	6	1	58					1	7119	12	39	30	4	5	8	2	1									
6516	6	41	34	4	3	12	1	1				30	4	5	8	7	1									
6520	6	38	35	8	7	12	1	1	7167	12	1	54					1									
			35	8	7	12	4	1																		
6550	6	29	52					1	7189	6	39	*33	5	4	1	2	1									
6660	6	1	78					1	*Normally shows short position 1-3-6-9.																	
6661	6	1	89					1	7199	6	39	30	5	4	12	7	1									
6662	6	1	81					1				32	5	4	12	9	1									
			81					1	7233	6	39	33	5	4	2	7	1									
6663	6	41	33	3	4	12	2	1	*Normally shows short position 1-3-6-9.																	
			33	3	4	12	7	1	7247	12	8	75					1									
6664	6	2	83					1				*90					2									
6669	6	3	77					1	*Tube good if it reads 22 or more.																	
6676	6	1	64					1	7258	12	13	62					1									
6677	6	39	*32	5	4	2	9	1				61					2									
*Normally shows short position 3-8.									7308	6	8	23					1									
6678	6	11	79					1				24					2									
			55					2	7320	6	23	68					1									
6679	12	8	79					1	7355	6	38	37	7	2	12	6	1									
			79					2	7360	6	39	29	4	5	12	3	1									
6680	12	8	75					1	7370	40	39	24	4	5	8	2	1									
			75					2				24	4	5	8	7	1									
6681	12	8	*85					1	7408	6	29	80					1									
			*85					2	7543	6	1	85					1									
*Tube good if it reads 22 or more.									7551	15	39	*33	4	5	9	2	1									
6686	6	9	60					1	*Normally shows short position 3-8.																	
6687	6	1	89					1	7558	6	39	*26	4	5	3	2	1									
6688	6	23	82					1	*Normally shows short position 1-9.																	
6689	6	39	25	4	5	12	2	1	7581	6	29	64					1									

*Normal Shorts refer to position of "D" Switch. ♦Use TC-80 Adapter.

6147-8278

B & K DYNA-JET MODEL 707 TUBE CHART

TUBE TYPE	Heater	Socket	Sensi- tivity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensi- tivity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensi- tivity	A	B	C	D	Test Pos.
8327	6	23	65					1	CV452	6	6	85					1	CV686	50	38	*85	2	11	3	5	1
8417	6	29	54					1				78					2	*Normally shows short position 11.								
8425	6	1	87					1	CV453	6	1	91					1	*Normally shows grid emission.								
8458	12	44	32	4	5	9	1	1	CV454	6	1	78					1	CV692	6	31	8					1
			32	4	5	9	3	1	CV455	12	8	74					1				8					2
8552	12	38	*38	7	2	1	5	1				74					2	CV694	12	30	77					1
*Normally shows short position 4-6.									CV491	12	8	75					1	CV697	12	30	83					1
8556	6	39	*73	5	4	7	8	1				75					2	CV698	12	30	83					1
*Normally shows shorts position 1, 3, 6, 9									CV492	12	8	*85					1	CV700	12	38	46	8	7	12	2	1
8908	6	38	*30	7	8	1	5	1				*85					2				68	8	7	12	4	1
*Normally shows short position 2-6.									*Tube good if it reads 22 or more.									CV703			68	8	7	12	5	1
8950	12	36	*27	1	12	9	5	1	CV493	6	41	44	4	3	12	1	1	CV706	6	38	35	7	2	12	5	1
*Normally shows shorts position 2, 3, 4, 6, 10, 11												44	4	3	12	6	1	CV717	5	33	48	7	2	12	10	1
9001	6	1	93					1	CV511	6	29	79					1				22					1
9002	6	41	*46	4	3	1	6	1	CV538	12	38	37	7	2	12	5	1	CV723			22					2
*Normally shows short position 2-7.									CV544	12	30	84					1	CV726	3	38	39	7	2	12	5	1
9003	6	1	*73					1	CV547	12	38	42	8	7	12	2	1	CV728	35	37	31	8	1	12	2	1
*Tube good if it reads 23 or more.												71	8	7	12	4	1	CV729	2	38	53	7	2	12	10	1
9006	6	41	*55	4	3	1	5	1				71	8	7	12	5	1	CV731	5	33	12					1
*Normally shows short position 2-7.									CV551	25	29	45					1				12				2	
A863	6	38	50	7	2	12	10	1	CV552	25	29	47					1	CV732	6	29	91					1
A1834	6	38	35	8	7	12	1	1	CV553	25	29	47					1	CV737	6	34	11					1
			35	8	7	12	4	1	CV554	6	38	48	7	2	12	3	1	CV747	6	30	60					1
AR18	6	38	40	7	2	12	10	1				48	7	2	12	5	1	CV753	2	41	*70	7	1	2	6	1
			63	7	2	12	4	1	CV559	25	38	34	7	2	12	3	1	*Normally shows short position 5-11.								
ARDD3	6	38	63	7	2	12	5	1				34	7	2	12	5	1	CV755	1	38	55	7	2	12	5	1
			48	7	2	12	3	1	CV561	35	29	54					1	CV756	1	38	55	7	2	12	5	1
ARH1	6	38	44	7	2	12	10	1	CV562	35	29	54					1	CV760	1	38	55	7	2	12	5	1
ARP15	6	38	52	7	2	12	10	1	CV565	35	37	31	8	1	12	2	1	CV764	2	38	54	7	2	12	10	1
ARP16	6	38	50	7	2	12	10	1	CV567	35	38	33	7	2	3	5	1	CV768	2	38	48	7	2	12	5	1
ARP17	6	29	91					1	CV568	35	38	33	7	2	3	5	1	CV770	2	38	54	7	2	12	10	1
ARP32	6	29	79					1	CV571	50	29	47					1				64	7	2	12	4	1
ARP33	6	29	79					1	CV572	6	33	15					1				67	7	2	12	5	1
ARTH-1	6	38	35	7	2	12	5	1				15					2	CV772	1	38	55	7	2	12	4	1
AU13	5	33	32					1	CV573	6	33	15					1				55	7	2	12	5	1
			32					2				15					2	CV773	1	38	55	7	2	12	4	1
AZ32	4	33	32					1	CV574	6	33	15					1				55	7	2	12	5	1
			32					2				15					2	CV775	1	37	62	8	1	12	4	1
B36	12	25	78					1	CV575	5	33	16					1	CV776	1	37	55	8	1	12	6	1
			78					2				16					2	CV777	1	37	54	8	1	5	6	1
B65	6	25	78					1	CV578	6	38	45	7	2	12	5	1	CV778	1	37	68	8	1	12	4	1
			78					2	CV579	6	38	45	7	2	12	5	1	CV779	2	37	53	8	1	12	6	1
B152	12	8	74					1	CV580	6	38	45	7	2	12	5	1				63	8	1	12	4	1
			74					2	CV581	6	29	99					1	CV780	2	37	52	8	1	12	6	1
B309	12	8	74					1	CV582	6	29	99					1				60	8	1	12	4	1
			74					2	CV583	6	29	99					1	CV781	1	37	53	8	1	5	6	1
B319	7	39	33	5	4	7	2	1	CV586	6	29	63					1	CV782	1	41	57	7	1	5	4	1
			33	5	4	7	6	1	CV587	6	38	40	7	2	12	10	1	CV783	1	41	*55	7	1	5	3	1
B329	12	9	75					1				63	7	2	12	4	1	*Normally shows short position 2-6.								
			75					2				63	7	2	12	5	1	CV784	1	41	56	7	1	12	6	1
B339	12	8	*85					1	CV588	6	38	40	7	2	12	10	1				95	7	1	12	3	1
			*85					2				63	7	2	12	4	1	CV785	1	41	55	7	1	5	6	1
*Tube good if it reads 22 or more.									CV589	6	38	40	7	2	12	10	1	CV786	1	38	54	7	2	12	5	1
B719	6	8	70					1				63	7	2	12	4	1	CV797	6	41	32	4	3	5	1	1
			70					2				63	7	2	12	5	1	CV805	50	38	35	7	2	12	3	1
BPM04	6	3	77					1	CV590	6	30	83					1	CV807	3	41	*36	7	1	5	4	1
CV131	6	41	35	4	3	12	1	1	CV591	6	30	83					1	*Normally shows short position 2-6.								
CV133	6	41	41	4	3	1	6	1	CV592	6	30	83					1	CV808	3	41	45	7	1	4	3	1
CV136	6	41	34	4	3	12	1	1	CV593	5	33	12					1				45	7	1	4	5	1
CV138	6	41	30	4	3	12	1	1				12					2	CV815	2	37	43	8	1	7	6	1
CV140	6	41	33	3	4	12	2	1	CV594	6	30	77					1	CV818	3	41	*42	7	1	5	3	1
			33	3	4	12	7	1	CV595	6	30	77					1	*Normally shows short position 2-6.								
CV216	50	38	*99	2	1	3	5	1	CV657	6	38	50	7	2	12	10	1	CV819	3	38	45	7	2	8	5	1
*Normally shows short position 11.									CV660	6	30	60					1	CV820	3	41	*48	7	1	5	3	1
*Normally shows grid emission.									CV661	6	30	74					1	*Normally shows short position 2-6.								
CV283	6	41	33	3	4	12	2	1	CV664	6	41	*46	4	3	1	6	1	CV841	5	33	16					1
			33	3	4	12	7	1	*Normally shows short position 2-7.												16				2	
CV450	6	29	*62					1	CV665	6	1	*73					1	CV842	5	33	32					1
*For plate cap use jack next to socket 26.									*Tube good if it reads 23 or more.												32				2	

*Normal Shorts refer to position of "D" Switch.

B & K DYNA-JET MODEL 707 TUBE CHART

TUBE TYPE	Heater	Socket	Sensi- tivity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensi- tivity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensi- tivity	A	B	C	D	Test Pos.
CV844	6	38	40	7	2	12	5	1	CV924	12	25	*85					1	CV1856	5	33	32					1
CV845	6	38	40	7	2	12	5	1				*85					2	CV1857	5	38	52	8	7	12	3	1
CV846	6	30	60					1				*Tube good if it reads 22 or more.					1	CV1862	6	3	77					1
CV848	6	1	80					1	CV925	12	25	78					2	CV1863	5	33	12					1
CV849	6	30	60					1				78						CV1864	5	33	12					2
CV850	6	1	63					1	CV930	12	37	45	8	1	12	4	1	CV1873	6	30	74					1
CV851	6	38	35	7	2	12	5	1				45	8	1	12	5	1	CV1876	6	30	60					1
CV852	6	41	14	4	3	1	6	1	CV939	25	38	40	7	2	12	5	1	CV1878	6	38	54	7	2	12	5	1
CV858	6	2	60					1	CV945	30	37	40	8	1	12	2	1	CV1882	6	30	38					1
			60					2				40	8	1	12	7	1	CV1893	6	38	55	7	2	12	10	1
CV862	6	38	53	7	2	12	5	1	CV946	30	37	40	8	1	12	2	1				65	7	2	12	4	1
CV865	6	30	69					1				40	8	1	12	7	1	CV1894	6	38	55	7	2	12	10	1
CV866	6	30	83					1	CV995	6	41	36	4	3	2	1	1				65	7	2	12	4	1
CV867	6	38	46	8	7	12	2	1	CV1067	6	29	93					1	CV1895	50	38	*70	2	11	3	5	1
			68	8	7	12	4	1	CV1071	5	33	16					1				65	7	2	12	5	1
CV873	6	33	68	8	7	12	5	1				16					2				65	7	2	12	5	1
			17					1	CV1074	6	38	50	7	2	12	10	1	CV1902	6	38	45	7	2	12	5	1
			17					2	CV1268	5	33	32					1	CV1908	6	38	40	7	2	12	10	1
CV876	6	37	48	8	1	12	3	1				32					2				65	7	2	12	4	1
			48	8	1	12	6	1	CV1280	6	38	44	7	2	12	10	1				65	7	2	12	5	1
CV877	6	37	45	8	1	12	6	1	CV1285	6	38	47	7	2	12	4	1	CV1895	50	38	*70	2	11	3	5	1
CV878	6	37	40	8	1	12	4	1				47	7	2	12	5	1				*Normally shows short position 11.					
CV879	6	37	40	8	1	12	6	1	CV1301	6	38	48	7	2	12	3	1				*Normally shows grid emission.					
CV880	6	37	52	8	1	12	6	1				48	7	2	12	5	1	CV1902	6	38	45	7	2	12	5	1
CV881	6	37	52	8	1	12	6	1	CV1375	6	9	62					1	CV1908	6	38	40	7	2	12	10	1
CV882	6	37	40	8	1	4	3	1	CV1377	5	33	10					1	CV1909	6	38	40	7	2	12	10	1
			68	8	1	4	5	1				10					2	CV1910	6	38	40	7	2	12	10	1
			68	8	1	4	6	1	CV1633	12	8	74					1	CV1911	6	29	91					1
CV883	6	37	42	8	1	12	4	1				74					2	CV1912	6	29	91					1
CV885	6	37	38	8	1	12	6	1	CV1649	6	29	99					1	CV1926	6	26	52					1
CV886	6	37	38	8	1	12	6	1	CV1741	6	29	53					1	CV1928	12	1	78					1
CV887	6	37	50	8	1	4	3	1	CV1753	35	37	34	8	1	12	6	1	CV1929	6	38	48	7	2	12	3	1
			68	8	1	4	5	1	CV1757	6	1	93					1				48	7	2	12	5	1
			68	8	1	4	6	1	CV1758	1	41	55	7	1	5	6	1	CV1930	6	38	48	7	2	12	3	1
CV890	6	37	*33	8	2	1	5	1	CV1762	6	1	82					1				48	7	2	12	5	1
			68	8	1	4	6	1										CV1931	6	38	48	7	2	12	3	1
			68	8	1	4	5	1	CV1763	6	41	*85	4	3	1	7	1				48	7	2	12	5	1
			68	8	1	4	6	1										CV1932	6	29	93					1
			68	8	1	4	5	1	CV1777	6	37	37	8	1	12	6	1	CV1933	6	29	93					1
CV892	6	37	47	8	1	12	6	1	CV1784	6	30	38					1	CV1934	6	29	93					1
			68	8	1	12	3	1	CV1790	6	37	50	8	1	12	3	1				6	29	93			1
			68	8	1	12	4	1										CV1935	6	38	50	7	2	12	10	1
CV893	6	37	45	8	1	12	4	1	CV1800	1	38	57	7	2	12	5	1	CV1936	6	38	50	7	2	12	10	1
			45	8	1	12	5	1	CV1802	1	38	57	7	2	12	5	1	CV1937	6	38	50	7	2	12	10	1
CV894	6	37	36	8	1	12	6	1	CV1803	1	38	54	7	2	12	5	1	CV1938	6	29	92					1
CV895	6	37	35	8	1	12	6	1	CV1805	1	38	54	7	2	12	5	1	CV1940	6	29	92					1
CV896	6	37	45	8	1	12	4	1	CV1811	1	38	58	7	2	12	5	1	CV1941	6	38	52	7	2	12	10	1
			65	8	1	12	5	1				86	7	2	12	10	1	CV1942	6	38	52	7	2	12	10	1
			65	8	1	12	6	1				*99	7	2	12	8	1	CV1943	6	38	52	7	2	12	10	1
CV897	6	37	35	8	1	12	6	1				*Tube good if it reads 30 or more.						CV1944	6	38	35	7	2	12	5	1
			50	8	1	12	4	1	CV1818	1	38	55	7	2	12	10	1	CV1945	6	38	35	7	2	12	5	1
CV898	6	37	42	8	1	12	4	1				96	7	2	12	5	1	CV1946	6	38	35	7	2	12	5	1
			42	8	1	12	5	1	CV1819	6	29	93					1	CV1947	6	29	63					1
CV899	6	37	35	8	1	12	4	1	CV1820	1	38	55	7	2	12	10	1	CV1948	6	29	63					1
CV900	6	37	35	8	1	12	6	1				96	7	2	12	5	1	CV1949	6	41	43	4	3	12	1	1
			72	8	1	12	3	1	CV1821	2	38	53	7	2	12	10	1	CV1950	6	38	44	7	2	12	10	1
			72	8	1	12	4	1	CV1823	2	38	53	7	2	12	10	1	CV1951	6	38	44	7	2	12	10	1
CV901	6	37	45	8	1	12	3	1	CV1824	1	38	48	7	2	12	5	1	CV1956	6	38	47	7	2	12	4	1
CV910	12	38	45	7	2	12	5	1	CV1826	1	38	48	7	2	12	5	1				47	7	2	12	5	1
CV916	12	38	48	7	2	12	3	1	CV1829	1	38	54	7	2	12	5	1	CV1957	6	38	47	7	2	12	4	1
			48	7	2	12	5	1	CV1846	5	33	22					1				47	7	2	12	5	1
CV917	12	38	50	7	2	12	10	1				22					2	CV1958	6	38	47	7	2	12	4	1
CV918																										

*Normal Shorts refer to position of "D" Switch.

CV844-CV1963

B & K DYNA-JET MODEL 707 TUBE CHART

TUBE TYPE	Heater	Socket	Sensi- tivity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensi- tivity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensi- tivity	A	B	C	D	Test Pos.
CV1964	6	38	52 63 63	7 7 7	2 2 2	12 12 12	10 4 5	1 1 1	CV3523	6	38	*38	7	2	1	5	1	DL36	1	38	48	7	2	12	5	1
																		DL91	1	41	*55	7	1	5	3	1
CV1966	6	38	37	7	2	12	5	1																		
CV1967	6	38	37	7	2	12	5	1	CV3798	50	38	*70	2	11	3	5	1	DL92	3	41	*48	7	1	5	3	1
CV1969	6	38	48	8	7	12	3	1																		
CV1970	6	38	48	8	7	12	3	1																		
CV1972	6	38	41	8	7	12	3	1																		
CV1973	6	38	41	8	7	12	3	1																		
CV1974	6	38	47	7	2	12	10	1	CV3799	50	38	*69	2	11	3	5	1	DL93	3	41	*36	7	1	5	4	1
CV1975	6	38	47	7	2	12	10	1																		
CV1976	6	38	37	7	2	12	5	1																		
CV1978	6	30	77					1																		
CV1981	6	30	84					1	CV4007	6	41	33	3	4	12	2	1	DL94	3	41	*45	7	1	5	6	1
CV1982	6	30	84					1																		
CV1985	6	25	*85					1																		
			*85					2																		
	*Tube good if it reads 22 or more.																									
CV1988	6	25	78					1	CV4010	6	1	63														
			78					2	CV4018	6	41	32	4	3	5	1	1	DP61	6	1	63					1
CV1990	6	38	42	8	7	12	2	1	CV4024	12	8	74					1	DY30	1	32	55					1
			71	8	7	12	4	1																		
			71	8	7	12	5	1																		
CV1991	6	38	42	8	7	12	2	1																		
			71	8	7	12	4	1	D2M9	6	41	33	3	4	12	2	1	DY87	1	24	35					1
			71	8	7	12	5	1																		
CV1993	6	30	92					1	D63	6	38	48	7	2	12	3	1	E55L	6	44	*25	4	5	7	8	1
CV1995	6	38	52	8	7	12	2	1																		
			72	8	7	12	4	1	D77	6	41	33	3	4	12	2	1									
			72	8	7	12	5	1																		
			72	8	7	12	2	1																		
			72	8	7	12	4	1																		
			72	8	7	12	5	1																		
CV2128	6	39	85	5	4	12	1	1																		
			38	5	4	12	9	1																		
CV2129	6	39	33	5	4	8	9	1	D152	6	41	33	3	4	12	2	1	E80CF	6	11	72					2
CV2370	3	41	*48	7	1	5	3	1																		
									D193	3	41	*36	7	1	5	4	1									
CV2390	3	41	*36	7	1	5	4	1																		
CV2500	35	38	33	7	2	12	5	1																		
CV2507	1	41	52	7	1	5	6	1																		
CV2522	6	1	77					1																		
CV2524	6	1	82					1																		
CV2526	6	6	91					2																		
			78					1																		
CV2534	50	29	47					1																		
CV2704	6	37	*33	8	2	1	5	1																		
																				</						

*Normal Shorts refer to position of "D" Switch.

CV1964-EBF80

B & K DYNA-JET MODEL 707 TUBE CHART

TUBE TYPE	Heater	Socket	Sensitivity	A	B	C	D	Test Pos.
6BR5	6	39	31 62 62	5 5 5	4 4 4	12 12 12	2 7 8	1 1 1
EBF89	6	39	33 60	5 5	4 4	12 12	2 7	1 1
EC81	6	39	60 30	5 4	4 5	12 12	8 1	1 1
EC86	6	40	29	4	5	3	6	1
EC88	6	39	*85	4	5	7	8	1
*Normally shows short position 1-3-6-9.								
EC90	6	41	41	4	3	1	6	1
EC91	6	41	*29	4	3	6	1	1
*Normally shows short position 2-5.								
EC92	6	2	83					1
EC95	6	41	32	4	3	1	2	1
EC97	6	41	33	4	3	1	2	1
EC806S	6	40	29	4	5	3	6	1
EC900	6	5	56					1
EC8010	6	39	*73	5	4	7	8	1
*Normally shows shorts position 1, 3, 6, 9								
ECC35	6	25	*85 *85					1 2
*Tube good if it reads 22 or more.								
ECC81	12	8	74 74					1 2
ECC82	12	8	75 75					1 2
ECC83	12	8	*85 *85					1 2
*Tube good if it reads 22 or more.								
ECC84	6	39	33 33	5 5	4 4	7 7	2 6	1 1
ECC85	6	8	70 70 70					1 1 2
ECC86	6	39	33 33	5 5	4 4	12 12	2 7	1 1
ECC88	6	39	31 31	5 5	4 4	12 12	2 7	1 1
ECC89	6	39	29 29	4 4	5 5	7 7	2 2	1 1
ECC91	6	2	29 60 60	4 4 4	5 5 5	7 12 12	6 1 2	1 1 2
ECC189	6	8	30 30					1 2
ECC801S	12	8	74 74					1 2
ECC802S	12	8	75 75					2 2
ECC808	6	39	36 36	4 4	5 5	12 12	1 9	1 1
ECC808	6	39	41 41	4 4	5 5	6 6	1 9	1 1
ECC960	6	2	49 49					1 2
ECF80	6	11	66 55					1 2
ECF82	6	11	79 56					1 2
ECF86	6	39	25 25	4 4	5 5	3 3	2 2	1 1
ECF200	6	42	25 30 30	4 5 5	5 6 6	12 12 12	6 3 10	1 1 1
ECF201	6	42	28 32	5 5	6 6	12 12	3 10	1 1
ECF202	6	42	29 33	5 5	6 6	12 12	3 10	1 1
ECF801	6	22	62 78					1 2

TUBE TYPE	Heater	Socket	Sensitivity	A	B	C	D	Test Pos.
6BR5	6	11	80 85					1 2
ECF805	6	39	30 33	4 4	5 5	8 8	7 9	1 1
ECF81	6	39	85 38	5 5	4 4	12 12	1 9	1 1
ECF83	6	39	30 34	5 5	4 4	12 12	2 9	1 1
ECF84	6	22	88 93					1 2
ECF200	6	42	31 30	5 5	6 6	12 12	3 8	1 1
ECF80	6	39	37 44	5 5	4 4	12 12	9 2	1 1
ECF82	6	39	33 33	5 5	4 4	12 12	3 3	1 1
ECF84	6	39	39 26	5 4	4 5	12 12	1 8	1 1
ECF85	6	39	26 25	4 4	5 5	12 12	1 2	1 1
ECF86	6	39	25 35	4 4	5 5	2 7	8	
ECF800	6	39	*99 36 36	4 4 4	5 5 5	12 12 12	1 2 6	1 1 1
*Tube good if it reads 25 or more.								
ED2	6	41	33 33	3 3	4 4	12 12	2 7	1 1
ED500	6	44	*52 *52	4 4	5 5	12 12	8 8	1 1
*Normally shows short position 2-3-6-7-9.								
EF22	6	37	36	8	1	12	6	1
EF37-A	6	38	37	2	7	1	10	1
EF80	6	9	76					1
EF85	6	9	62					1
EF86	6	39	40	5	4	2	9	1
EF89	6	9	80					1
EF91	6	41	30	4	3	12	1	1
EF92	6	41	35	4	3	12	1	1
EF93	6	1	78					1
EF94	6	1	82					1
EF95	6	1	63					1
EF96	6	1	80					1
EF98	6	41	30	4	3	12	1	1
EF183	6	9	40					1
EF184	6	9	58					1
EF804	6	39	39	5	4	2	9	1
EF806S	6	39	40	4	5	2	9	1
EF1200	6	42	27 27	5 5	6 6	12 12	1 8	1 1
EH90	6	1	94					1
EH900S	6	1	91					1
EK90	6	1	91					1
EL34	6	29	53					1
EL36	6	27	58					1
EL37	6	29	63					1
EL38	6	29	*62					1
*For plate cap use jack next to socket 26.								
EL81	6	39	*32	5	4	7	2	1
*Normally shows short position 1-6-9.								
EL82	6	23	68					1
EL83	6	39	30	5	4	12	2	1
EL84	6	23	68					1
EL85	6	39	*39	5	4	1	2	1
*Normally shows short position 6-8.								
EL86	6	23	58					1
EL90	6	3	77					1
EL91	6	41	34	4	3	12	1	1
EL95	6	3	88					1
EL500	6	44	*25	4	5	2	1	1
*Normally shows short position 3-6-7-8.								

TUBE TYPE	Heater	Socket	Sensitivity	A	B	C	D	Test Pos.
EL505	6	44	*31 *31	4 4	5 5	3 3	7 8	1 1
*Normally shows short position 1-2-6-8.								
EL505	6	44	*26 *26	4 4	5 5	1 1	8 8	1 1
*Normally shows short position 2-3-6-7.								
EL508	6	44	30 30	4 4	5 5	1 1	8 8	1 1
EL509	6	44	*26 *26	4 4	5 5	1 1	8 8	1 1
*Normally shows short position 2-3-6-7.								
EL802	6	9	51					1
EL803	6	39	30	5	4	12	2	1
EL820	6	39	*32	5	4	7	2	1
*Normally shows short position 1-6-9.								
EL821	6	9	55					1
ELL80	6	39	29 29	4 4	5 5	12 12	2 6	1 1
EM-87	6	39	52 52	4 4	5 5	2 2	1 1	1 1
EN93	6	41	43	4	3	12	1	1
EQ80	6	39	33	5	4	3	7	1
EY81	6	39	33	5	4	2	9	1
EY82	6	39	29	4	5	6	9	1
EY86	6	40	*95	5	4	1	10	1
*Normally shows short position 6-11.								
EY87	6	40	*95	5	4	1	10	1
*Normally shows short position 6-11.								
EY88	6	40	30	5	4	7	3	1
*If no test, use alternate settings.								
EY88	6	40	30	5	4	3	7	1
EY500	6	38	32	7	8	2	5	1
EZ35	6	33	15 15					1 2
EZ80	6	39	40 40	5 5	4 4	12 12	1 1	1 2
EZ81	6	39	40 34 34	5 5 5	4 4 4	12 12 12	7 1 7	1 1 1
EZ90	6	41	44 44	4 4	3 3	12 12	1 6	1 1
G180/ZM	50	38	*99	2	11	3	5	1
*Tube good if it reads 60 or more.								
*Normally shows short position 11.								
*Normally shows grid emission.								
GY501	3	44	*94	4	5	4	10	1
*No short test.								
GZ-30	5	33	12 12					1 2
GZ-32	5	33	12 12					1 2
GZ-34	5	33	10 10					1 2
H63	6	38	40	7	2	12	10	1
HABC80	19	17	90 63					1 2
HBC90	12	6	85 78					1 2
HBC91	12	6	91 78					1 2
HCC85	17	8	65 65					1 2
HCH81	12	39	32 35	5 5	4 4	12 12	2 9	1 1
HD14	1	38	55 96	7 7	2 2	12 12	10 5	1 1
HF93	12	1	78					1
HF94	12	1	82					1
HK90	12	1	91					1
HL90	19	3	77					1
HL92	50	4	44					1
HL94	30	41	27	3	4	5	2	1
HMO4	6	1	91					1
HY90	35	41	33	4	3	6	5	1
KT32	25	29	47					1
KT63	6	29	91					1

ERE83_KT63

B & K DYNA-JET MODEL 707 TUBE CHART

TUBE TYPE	Heater	Socket	Sensitiv-ity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensitiv-ity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensitiv-ity	A	B	C	D	Test Pos.
K166	6	29	63					1	NR85	6	29	91					1	PFL200	17	42	27	5	6	12	1	1
K188	6	29	43					1	NR95	25	29	47					1	PH4	6	38	45	7	2	12	5	1
K1263	6	38	50	7	2	12	10	1	NU20	5	33	32					2	PL36	25	27	58					1
L63	6	29	93					1				32					2	PL81	19	39	*32	5	4	7	2	1
L77	6	41	41	4	3	1	6	1	OBC3	12	38	42	8	7	12	2	1	*Normally shows short position 1-6-9.								
LC900	3	5	56					1	OF1	6	38	47	7	2	12	4	1	PL82	16	23	68					1
LCF80	6	11	66					2	OH4	12	38	45	7	2	12	5	1	PL83	12	39	30	5	4	12	2	1
			55					1	OSW2190	6	30	60					1	PL84	15	23	58					1
LCF200	5	42	30	5	6	12	3	1	OSW2192	6	30	38					1	PL95	4	3	88					1
			30	5	6	12	10	1	OSW2600	6	30	60					1	PL500	30	44	*25	4	5	2	1	1
LCF201	5	42	28	5	6	12	3	1	OSW2601	6	30	38					1	*Normally shows short position 3-6-7-8.								
			32	5	6	12	10	1	OSW3105	6	38	42	8	1	12	2	1	PL504	30	44	*25	4	5	2	1	1
LCF-201	6	11	80					2				71	8	1	12	4	1	*Normally shows short position 3-6-7-8.								
			85					1				71	8	1	12	5	1	PL505	40	44	*26	4	5	1	8	1
LCF801	5	22	62					1									1	*Normally shows short position 2-3-6-7.								
			78					2	OSW3106	6	29	79					1	PL508	17	44	30	4	5	1	8	1
LCH200	5	42	31	5	6	12	3	1	OSW3108	6	29	63					1	PL-509	30	44	*26	4	5	1	8	1
			30	5	6	12	8	1	OSW3109	6	38	48	7	2	12	3	1	*Normally shows short position 2-3-6-7.								
LCL80	4	39	37	5	4	12	9	1				48	7	2	12	5	1	PL521	30	44	*29	4	5	1	8	1
			44	5	4	12	2	1	OSW3111	6	30	84					1	*Normally shows short position 2-3-6-7.								
LCL82	12	39	33	5	4	12	3	1	OSW3112	6	29	93					1	PL802	16	9	51					1
			39	5	4	12	1	1	PABC80	9	17	90					2	PL820	19	39	*32	5	4	7	2	1
LCL84	10	39	26	4	5	12	8	1				63					1	*Normally shows short position 1-6-9.								
			26	4	5	12	1	1	PC86	4	40	29	4	5	3	6	1	PM04	6	1	78					1
LCL85	10	39	25	4	5	12	9	1	PC88	4	39	*85	4	5	7	8	1	PM05	6	1	63					1
			25	4	5	12	2	1	*Normally shows short position 1-3-6-9.								PY32	30	38	24	2	7	6	3	1	
LF183	4	9	40					1	PC92	3	2	83					1	PY80	19	39	29	5	4	12	9	1
LF184	4	9	58					1	PC95	4	41	33	4	3	1	2	1	PY81	17	39	33	5	4	2	9	1
LFL200	10	42	27	5	6	12	1	1	PC97	5	41	33	3	4	1	2	1	PY82	19	39	29	4	5	6	9	1
			27	5	6	12	8	1	PC900	4	5	56					1	PY88*	30	40	30	5	4	7	3	1
								1	PCC84	7	39	33	5	4	7	2	1	*If no test, use alternate settings.								
LL86	10	23	58					1				33	5	4	7	2	1	PY88	30	40	30	5	4	3	7	1
LL500	18	44	*25	4	5	2	1	1	PCC85	9	8	70					2	PY500	40	38	32	7	8	2	5	1
								1	PCC88	7	39	31	5	4	12	2	1	QA240	6	41	41	4	3	1	6	1
LL505	25	44	*26	4	5	1	8	1				31	5	4	12	7	1	QA2404	6	41	33	3	4	12	2	1
								1	PCC89	7	39	29	4	5	7	2	1		33	3	4	12	7			1
LL521	22	44	*29	4	5	1	8	1				29	4	5	7	6	1	QA2406	12	8	74					1
								1	PCC189	7	8	30					2		74							2
LL802	10	9	51					1	PCF80	9	11	66					1	QA2407	6	41	44	4	3	12	1	1
LN152	6	39	37	5	4	12	9	1				55					2		44	4	3	12	6		1	
			44	5	4	12	2	1	PCF82	9	11	79					1	QA2408	6	25	78					1
LY81	10	39	33	5	4	2	9	1				55					2		78						2	
LY88*	22	40	30	5	4	7	3	1	PCF86	7	39	25	4	5	3	2	1	QE03/10	6	39	33	5	4	8	9	1
								1				25	4	5	1	6	1	QE05/40	6	38	*38	7	2	1	5	1
LY88	22	40	30	5	4	3	7	1	PCF200	8	42	30	5	6	12	3	1	*Normally shows short position 4-6.								
LY500	30	38	32	7	8	2	5	1				30	5	6	12	10	1	QS150/40	50	38	*99	2	11	3	5	1
LZ319	9	11	66					1	PCF201	8	42	28	5	6	12	3	1	*Tube good if it reads 60 or more.								
			55					2				32	5	6	12	10	1	*Normally shows short position 11.								
LZ329	9	11	66					1	PCF801	8	22	62					1	*Normally shows grid emission.								
			55					2				78					2	QV03/12	6	39	33	5	4	8	9	1
M8081	6	2	60					1	PCF802	9	11	80					1	QV06/20	6	38	*38	7	2	1	5	1
			60					2				85					2	*Normally shows short position 4-6.								
M8100	6	1	63					1	PCF805	7	39	30	4	5	8	7	1	R52	5	33	12					1
N14	1	38	54	7	2	12	5	1				33	4	5	8	9	1				12					2
N17	3	41	*48	7	1	5	3	1	PCH200	9	42	31	5	6	12	3	1	SN7	1	32	55					1
								1				30	5	6	12	8	1	SP6	6	41	30	4	3	12	1	1
N18	3	41	*42	7	1	5	3	1	PCL82	16	39	33	5	4	12	3	1	T2M05	6	41	34	4	3	12	5	1
								1				39	5	4	12	1	1				34	4	3	12	6	1
N19	3	41	45	7	1	5	6	1	PCL84	15	39	26	4	5	12	8	1	TJ880	6	39	*27	5	4	6	2	1
N22LL	19	44	33	4	5	7	1	1				26	4	5	12	1	1	*Normally shows shorts position 3, 9								
N152	19	39	*32	5	4	7	2	1	PCL85	18	39	25	4	5	12	9	1	TM12	6	41	*85	4	3	1	7	1
								1				25	4	5	12	2	1	*Normally shows short position 5-6.								
N329	16	23	68					1	PCL86	14	39	25	4	5	2	8	1	TS51	6	1	63					1
N709	6	23	68					1				35	4	5	7	1	1	TS52	6	2	60					1
NCC189	4	39	30	5	4	12	2	1	PD500	9	44	*52	4	5	12	8	1				60					2
			30	5	4	12	7	1	*Normally shows short position 2-3-6-7-9.								TS-876C	6	39	*28	4	5	1	2	1	
NR67	6	38	44	7	2	12	10	1	PF9	6	38	52	7	2	12	10	1	U50	5	33	32					1
NR78	6	29	99					1	PF86	4	39	33	4	5	2	9	1				32					1
NR78A	6	29	93					1																		2
NR81	6	38	52	7	2	12	10																			

Use TC-80 Adapter

Use TC-62B

B & K DYNA-JET MODEL 707 TUBE CHART

TUBE TYPE	Heater	Socket	Sensi- tivity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensi- tivity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensi- tivity	A	B	C	D	Test Pos.
U52	5	33	16					1	VR105	50	38	*85	2	11	3	5	1	X155	6	8	55					1
			16					2																		2
U54	5	33	10					1										X727	6	1	91					1
			10					2										XB767A	6	38	34	7	2	12	5	1
U78	6	41	44	4	3	12	1	1	VR150/30	50	38	*99	2	11	3	5	1	XC95	2	41	33	4	3	1	2	1
			44	4	3	12	6	1																		
U147	6	33	15					1										XC97	2	41	33	4	3	1	2	1
			15					2										XC900	2	5	56					1
U149	6	37	45	8	1	12	3	1	VT52	6	29	92					1	XCC189	4	8	30					2
			45	8	1	12	6	1	VT65	7	29	99					1								1	
U153	17	39	33	4	5	2	9	1	VT66	6	29	91					1	XCF80	4	11	66					2
U154	19	39	29	4	5	6	9	1	VT1/4	5	33	12					1								2	
U192	19	39	29	4	5	6	9	1									2	XCF86	5	39	24	4	5	3	2	1
U709	6	39	34	5	4	12	1	1	VT86	6	38	52	7	2	12	10	1									1
			34	5	4	12	7	1	VT87	6	38	44	7	2	12	10	1	XCF801	4	22	62					1
			34	5	4	12	7	1	VT88	6	38	52	7	2	12	10	1	XCH81	3	39	85	5	4	12	1	1
UAA91	19	41	33	3	4	12	2	1				63	7	2	12	4	1									1
			33	3	4	12	7	1				63	7	2	12	5	1									1
UABC80	25	17	90					1	VT90	6	38	48	7	2	12	3	1									1
			63					2				48	7	2	12	5	1									1
UBF80	17	39	33	5	4	12	2	1	VT91	6	38	50	7	2	12	10	1									1
			33	5	4	12	2	1									1	XCL82	8	39	38	5	4	12	9	1
UC92	9	2	83					1	VT93	6	38	55	7	2	12	10	1									1
UCC84	22	39	33	5	4	7	2	1				65	7	2	12	4	1									1
			33	5	4	7	6	1	VT94	6	29	93					1	XF80	3	9	76					1
			33	5	4	7	6	1	VT96	6	38	47	7	2	12	4	1	XF85	3	9	62					1
												47	7	2	12	5	1	XF183	3	9	40					1
UCC85	25	8	70					1	VT97	5	33	32					1	XF184	3	9	58					1
			70					2				32					2	XL36	12	27	57					1
UCF80	25	11	66					1	VT99	6	38	45	7	2	12	5	1									1
			55					2				45	7	2	12	10	1	XL84	8	23	68					1
UCH81	19	39	32	5	4	12	2	1	VT102	6	29	92					1	XL86	8	23	58					1
			35	5	4	12	9	1	VT103	6	38	42	8	7	12	2	1	XL500	12	44	*25	4	5	2	1	1
UCL82	50	39	33	5	4	12	3	1				71	8	7	12	4	1									1
			39	5	4	12	1	1				71	8	7	12	5	1									1
UF80	19	9	76					1	VT104	12	38	42	8	7	12	2	1									1
UF85	19	9	62					1				71	8	7	12	4	1									1
UF86	12	39	40	5	4	2	9	1									1									1
UF89	12	9	80					1	VT105	6	38	48	8	7	12	3	1									1
UL84	50	23	58					1				48	8	7	12	4	1									1
UU12	6	39	34	5	4	12	1	1	VT107	6	29	79					1									1
			34	5	4	12	7	1	VT112	6	30	60					1									1
UY82	50	39	29	4	5	6	9	1	VT114	5	33	16					1									1
UY85	35	40	30	4	5	1	6	1				16					2	YF183	4	9	40					1
V2M70	6	41	44	4	3	12	1	1	VT115	6	29	63					1	YF184	4	9	58					1
			44	4	3	12	6	1	VT116	6	30	83					1	YL1371	12	38	*38	7	2	1	5	1
V177	6	41	35	4	3	12	1	1	VT117	6	30	84					1									1
V741	6	41	41	4	3	1	6	1									1	Z14	2	38	53	/	2	12	10	1
V884	6	41	35	4	3	12	1	1	VT124	1	38	55	7	2	12	5	1	Z63	6	38	50	7	2	12	10	1
V886	6	41	34	4	3	12	1	1	VT125	1	38	54	7	2	12	5	1	Z719	6	9	76					1
VP6	6	41	35	4	3	12	1	1	VT126	6	33	15					1	Z729	6	39	40	5	4	2	9	1
VP1321	12	41	*55	4	3	1	5	1				15					2	ZD17	1	41	*55	7	1	5	3	1
									W17	1	41	55	7	1	5	6	1									1
VR75	50	38	*70	2	11	3	5	1									1									1
									W77	6	41	35	4	3	12	1	1	ZD25	1	41	58	7	1	12	6	1
									W149	6	37	45	8	1	12	6	1									1
									W719	6	9	62					1	ZD151	6	39	37	5	4	12	2	1
VR90	50	38	*69	2	11	3	5	1	W727	6	1	78					1									1
									X63(M)	6	38	45	7	2	12	5	1									1
																	1									1
									X64	6	38	44	7	2	1	10	1	ZD152	6	39	37	5	4	12	2	1
									X73(M)	6	38	45	7	2	12	5	1									1
									X107	19	1	91					1									1

FIDELITY NORTHWEST, INC.

5920 So. 180th Street
Box C-88727, Tukwila Branch
Seattle, Wash. 98188
(206) 575-0604

So. 180th St



Handwritten notes and scribbles, including the number 1825 and other illegible markings.

Dean's Radio
417 N. Pearl
Ellensburg,